



Basic Manual

Contents/
Before use

Phone call

Text input

Phone book

Pair function

Mail

Hello Messenger

Camera

EZweb

EZ Navi

au Music

EZ • FM

PC site viewer

Troubleshooting/
Remote lock

Other features/
Index

Welcome

Thank you for purchasing a W42S.


Before using your W42S, read this W42S Basic Manual (PDF manual) to ensure correct use of your W42S. After you have finished reading this manual, save this PDF manual on your PC or recordable media, and store the printed manuals in a safe place so you can retrieve them whenever they are needed.

If you lose any of these manuals, contact an au shop or Customer Service Center.

Printed manuals for W42S (Japanese)

The W42S comes with the "W42S かんたんマニュアル" and the "W42S 取扱説明書."

"W42S かんたんマニュアル"

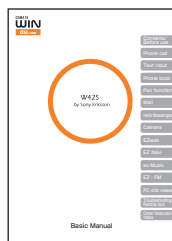

Equivalent to this PDF manual.

"W42S 取扱説明書"



English version is not available.

The following manuals are also available from the au homepage:


- The downloadable "W42S かんたんマニュアル" and "W42S 取扱説明書"
(<http://au-pro.kddi.com/phone/torisetu/index.html>)
- The au online manual (Japanese) for searching by keyword
(<http://www.au.kddi.com/manual/index.html>)

The au online manual (Japanese) is also available from the EZweb:

<To access>

EZ Top menu → 料金・申込・インフォ → au オンラインマニュアル

If you have any trouble with your cellphone, please visit the Sony Ericsson Mobile Communications Japan, Inc. web site and find out your problem before calling for professional repairs.

- From your W42S ⇒  (EZ) (for at least one second) (SonyEricsson@ez)
- From your PC ⇒ <http://www.SonyEricsson.co.jp/>



The font, typeface, shape and color used in this manual may differ from those used on actual screen or may be omitted.

Etiquette

Cellphone etiquette

- Cellphones emit weak signals at all times even if you just turn the power on.
- Enjoy using your cellphone safely without disturbing those around you.


■ ■ Some places forbid the use of cellphones.

- Do not use your cellphone while you are driving. Doing so is dangerous and against the law.
- Do not use your cellphone on airplanes. Signals may interfere with it's operation, and use of a cellphone on aircraft is against the law. Be sure to turn your cellphone off before you board an aircraft.



■ ■ Consider where to use your cellphone and be careful of how loud you are speaking.

- Do not make calls while in cinemas, theaters, museums, libraries or other similar places. Turn your cellphone off or set it to the manner mode to prevent others around you from being disturbed by the ringtone.
- Use your cellphone in places where you are not blocking traffic from passing.
- Move to areas where you do not disturb others on trains or in hotel lobbies.
- Take care not to speak too loudly during conversations.
- Ask for other people's permission before taking their photos with your cellphone's camera.

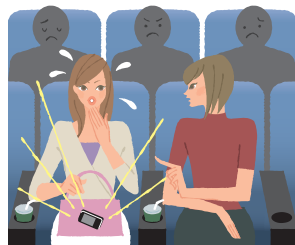

■ ■ Signals from cellphones may adversely effect medical apparatus and equipment.

- Some people close to you in busy places such as crowded trains may have a pacemaker. Turn your cellphone off in such places.
- Abide by the rules of hospitals and other medical institutions where it is forbidden to use or possess cellphones.



Basics of the cellphone

What W42S offers

Mail

You can send mails to other cellphones or PCs.



Page
48

Camera


You can take photos or record movies and send them by e-mail easily.



Page
66

EZweb

You can download Chaku-Uta®(ringtones), Chaku-Uta-Full®(full songs) or wallpaper.

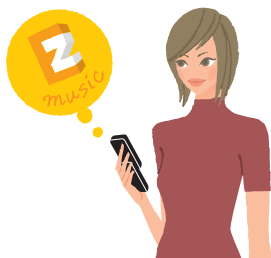

Page
75

EZ Navi

W42S supports "EZ Navi Walk," "Position Search" and "Area Message" functions to confirm various location information.



Page
84

EZ • FM


You can listen to EZ • FM.



Page
92

Hello Messenger

You can chat with registered members while sending or receiving texts, photos you took. Voice talks with the members are also available.

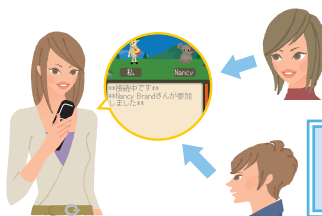

Page
62

Manner mode and record message

Manner mode

You can use the manner mode to turn ringtones and other tones off to prevent others from being disturbed.

Hold down マナー for at least one second on the idle screen.



Page
29

Record message

You can record messages from other parties using answering message when you are unable to answer the call.

Hold down メモ for at least one second on the idle screen.



Page
32

Check the power, the signal, and the battery!

Usually, keep the cellphone's "power" on.

To make or receive calls, turn the power on.

Hold down 電源 for at least one second.



Page
18

You cannot connect where you are not able to get a "signal."

It is sometimes difficult to get a signal in places even within the service area.

📶 indicates the reception strength.



Page
18

Pay attention to the remaining "battery" power.

The cellphone may not function properly if the remaining battery power is low.

🔋 indicates the remaining battery power.



Page
18

Do not use the cellphone while driving

It is against the law to even handle a cellphone while driving.

(November 1, 2004 Implementation of the Revised Road Traffic Law Enforcement)



✗ Glancing at the screen to see mail



✗ Holding the cellphone to talk

Use drive mode or turn the power off while driving

Drive mode

When the drive mode is set, the answering message saying "I am driving right now. Please leave your name and message after the beep." plays in Japanese and the caller's message can be recorded.

Press マナー  on the idle screen, press  and  to select "Drive."



Watch out for spam and one-ring call!

■ If you get a incoming spam...

You can use the mail filter function to block the mail you specify or mail marked with "未承諾広告※" (which may be spam).

The following mail functions are available for preventing spam:


- ・ "未承諾広告フィルター": To block spam
- ・ "アドレスフィルター": To filter various addresses
- ・ "指定拒否設定": To reject specified mails
- ・ "指定受信設定": To receive specified mails only



■ If you have an incoming call from an unknown number...

Such calls may be a scam to get you to return a call to the service with a very high charges. This is called a "one-ring call."



The icon  will appear in the Received calls when you receive a one-ring call.

Be careful when you return a call to a number you don't know.

Received	Dialed
① Jul 4 11:00	030001XXXX
② Jul 3 10:00	030004XXXX
③ Jul 3 9:00	Carol Adams
④ Jul 2 22:00	John Smith

Disaster Message Board Service

About Disaster Message Board

If a large scale disaster occurs, you can register your vital information through EZweb. The registered vital information can be viewed from anywhere in Japan through EZweb or the world through the Internet.

Registering the vital information


- ◆ If a large scale disaster occurs, from your cellphone you can register your vital information such as your condition or comments to the "Disaster Message Board" created on by EZweb.
- ◆ After registering your vital information, you can notify it by e-mail to your preregistered family or acquaintances. They will be able to know that you posted your vital information on the "Disaster Message Board."




 

 

Viewing the vital information

- ◆ You can view the vital information of a person you want to know by entering the phone number from EZweb or the Internet.*
- ※ You can view the vital information from other carriers' cellphones (except for TU-KA), PHS or PC by accessing <http://dengon.ezweb.ne.jp/>.

To access	 (EZ) → use  and  to select "Top menu" → "災害用伝言板"
	http://dengon.ezweb.ne.jp/

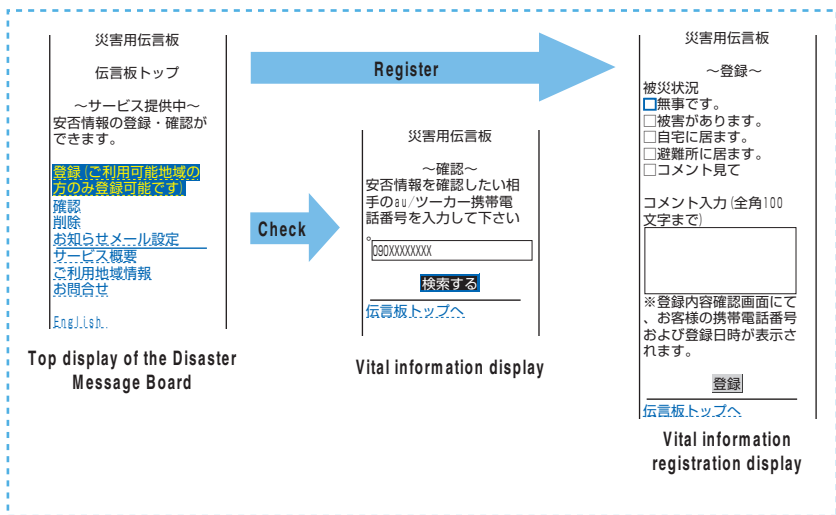



-  The registered information is saved for up to 72 hours.
-  Up to 10 entries can be registered per phone number. When the number of entries exceeds 10, the oldest entry will be overwritten.
-  A demonstration for this service can be viewed from  (EZ) → use  and  to select "Top menu" → "料金・申込・インフォ" → "災害用伝言板(デモ版)".
-  You can use the English version by selecting "English."

Contents

Etiquette	1
Cellphone etiquette	1
Basics of the cellphone	2
What W42S offers	2
Manner mode and record message	3
Check the power, the signal, and the battery!	3
Do not use the cellphone while driving	4
Use drive mode or turn the power off while driving	4
Watch out for spam and one-ring call!	5
Disaster Message Board Service	6
Before use	10
Checking the package	10
Names of parts	11
How to charge the battery	12
How to use the "Memory Stick Duo" (sold separately)	13
How to connect stereo earphone to W42S	14
How to use the keys	15
How to use Music Shuttle	17
How to use stereo earphone	17
Opening/Closing W42S	18
Turning the power on	18
Default settings	19
Before using English display	19
How to read the display	19
Using the Main menu	20
Initial settings for e-mail and EZweb	22
Confirming your cellphone number/e-mail address	23
Changing your e-mail address	24
Phone call	26
Making a call	26
Receiving a call	27
Redialing the number (Dialed/Received)	28
Changing the volume during a call	28
Setting the manner mode	29
Changing the volume and tone of the ringtone	30
Setting the record message	32
Playing back recorded messages	33
Text input	34
Changing the input mode	34
Inputting text	35
Phone book	40
Saving to the phone book	40
Editing the phone book	42
Making a call from the phone book	44
Saving from Dialed/Received calls	45
Pair function	46
Saving to the pair function	46
Making a call by using pair function	47

Mail	48
Using e-mail.....	48
Creating and sending e-mail.....	49
Opening a received e-mail.....	52
Replying to a received e-mail.....	54
Reading e-mails with photo or movie attached.....	55
Filtering spam.....	56
Using C-mail.....	57
Creating and sending C-mail.....	58
Opening a received C-mail.....	60
Hello Messenger	62
What you can do with Hello Messenger.....	62
Displaying Hello Messenger menu.....	63
Inviting members to join.....	64
When you receive an invitation from other members.....	65
Camera	66
What you can do with the camera.....	66
Successful taking of photos/movies.....	67
Taking photos.....	68
Recording movies.....	70
Viewing photos/movies you have taken.....	72
Attaching a photo/a movie to e-mail.....	73
Photo mail.....	74
EZweb	75
About EZweb.....	75
Displaying the EZ Top menu.....	76
Saving your favorite sites.....	77
Viewing a site saved to the Favorite site.....	78
Confirming your call costs.....	79
Downloading a Chaku-Uta®(ringtone).....	80
Downloading a Chaku-Uta-Full®(full song).....	82
EZ Channel.....	83
EZ Navi	84
What you can do with EZ Navi.....	84
What you can do with Security Navi.....	86
au Music	88
What you can do with au Music.....	88
Playing back a Chaku-Uta-Full® (full song).....	90
EZ • FM	92
How to listen to EZ • FM.....	92
Listening to EZ • FM.....	93
PC site viewer	95
What you can do with PC site viewer.....	95
Mastering operation basics.....	96
Using "待受指定" (Standby assignment).....	97
Troubleshooting	99
Remote lock	100
In the case you have lost your W42S.....	100
Other features	102
Index	104

 
Before use

Checking the package


◆ Main unit



◆ Battery pack



◆ Desktop holder

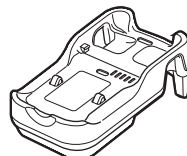

◆ Remote controller with microphone




◆ Stereo earphone (sample)



※ Please use the earphone pads come with stereo earphone.

◆ USB cable (sample)

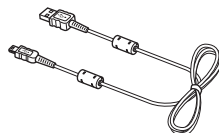

◆ "W42S かんたんマニュアル" (Japanese)



◆ "W42S 取扱説明書" (Japanese)



◆ CD-ROM

◆ Warranty (Japanese)

◆ Global Expert User's Guide (Japanese)

◆ Safety Precautions (Japanese)






"Memory Stick Duo" (sold separately) and Memory Stick Duo adaptor (sold separately) are not included in this package.



AC adaptor is not included in this package. Please purchase our standard AC adaptor 01 (optional).

Names of parts

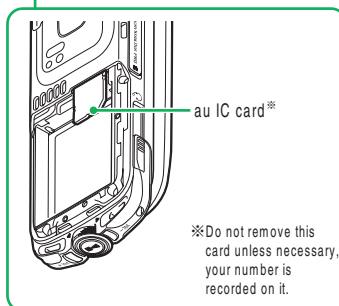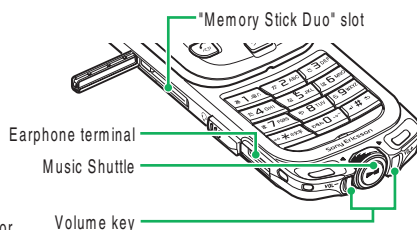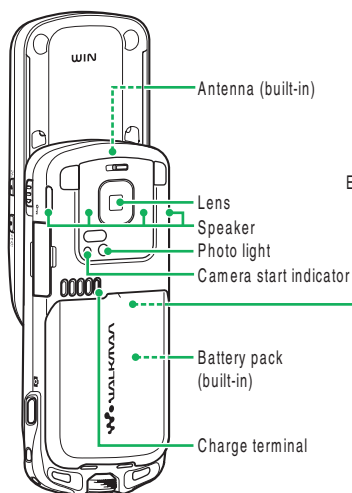

How to charge the battery

The battery pack is not fully charged at the time of purchase.

Before you use the W42S, charge the battery pack.

1

Connect the standard AC adaptor 01 (optional) to the connecting terminal (power source) on the desktop holder's base (upwards). Then place the power cord in the notch of the base.




Carefully check the connector shape, and then connect it.

2

Fold out the power plug of the standard AC adaptor 01 (optional), and plug it into a 100 V AC power outlet.

3

Straight upon the desktop holder, place W42S (closed and the battery pack installed) in the direction of the arrows (as shown below).

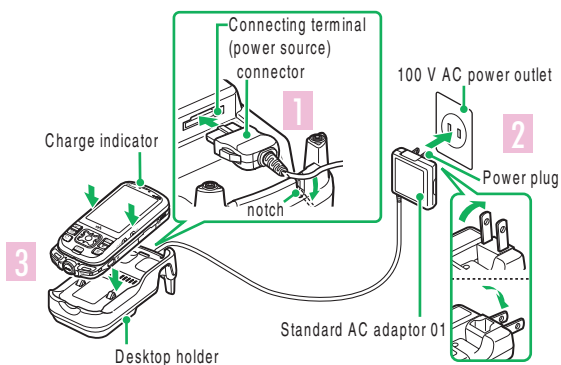

- **Charge start tone sounds and the charge indicator lights up in red**
→ **Charging is in progress.**
 appears.
- **Charge completed tone sounds and the charge indicator light turns off**
→ **Charging is finished.**




When the battery is fully charged, pull out W42S upwards.

■ ■ Charging by directly connecting the standard AC adaptor 01 (optional)

You can also charge the battery pack by directly connecting the standard AC adaptor 01 (optional) to the W42S.




Carefully check the connector shape, and then connect it.

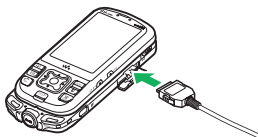


How to use the "Memory Stick Duo" (sold separately)

■ ■ To insert

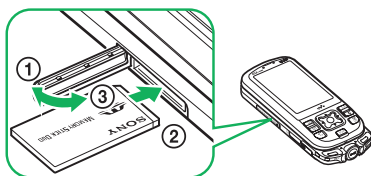

- ① Open the slot cover.
- ② Carefully check the direction of the "Memory Stick Duo," and then insert the "Memory Stick Duo" into the slot.
- ③ Close the slot cover.

■ ■ To remove

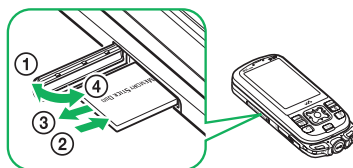

- ① Open the slot cover.
- ② Gently press the "Memory Stick Duo." (Be careful the "Memory Stick Duo" may pop out.)
- ③ Remove the "Memory Stick Duo."
- ④ Close the slot cover.



W42S is compatible only with "Memory Stick Duo." Do not insert any other external memory card.

How to connect stereo earphone to W42S

1



Connect the stereo earphone to the remote controller with microphone.

2

Slide the earphone terminal cover to open in the direction of the arrow (as shown below).




3

Insert the stereo earphone to the earphone terminal.

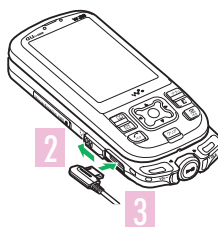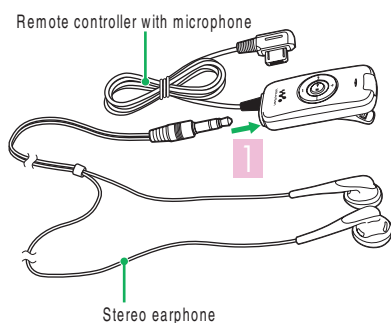


Do not force to connect in the wrong direction. Otherwise, it may cause damage. Please connect in the direction as shown in the illustration above.

How to use the keys

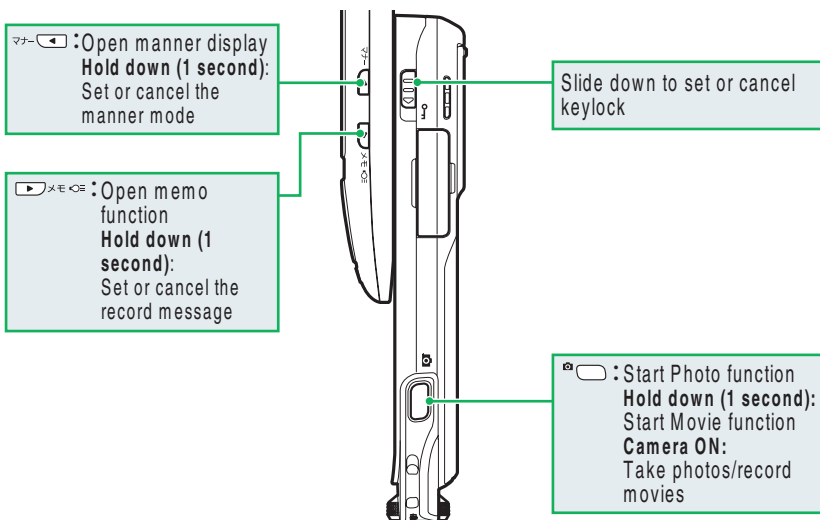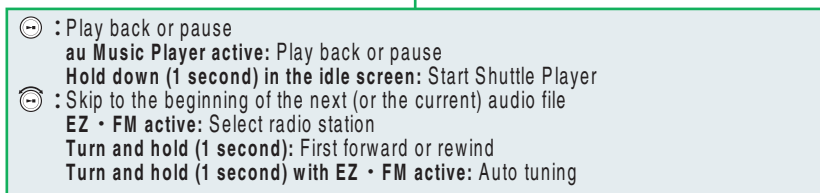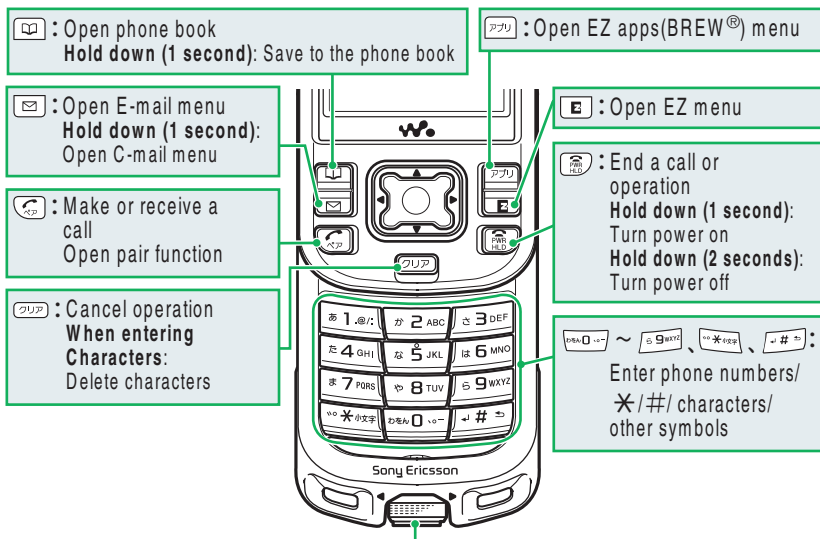

How to use the keys (continued)


How to use cross controller™

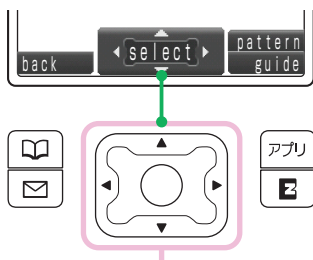

Display	Description in this manual	Operation	Explanation
			Press up and down Move the cursor up and down Operations in the idle screen :Open schedule :Open data folder (page 72)
			Press left and right Move the cursor left or right and display previous or next screen Operations in the idle screen :Open Received calls (page 28) :Open Dialed calls (page 28)
			Press center (center key) Select the item Operations in the idle screen Open Main menu



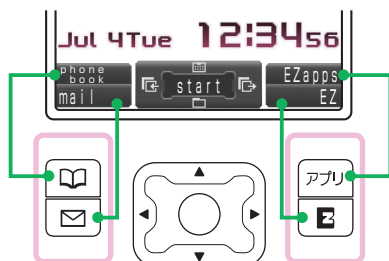

Soft keys

Soft keys work according to the displayed indication as shown in the illustration below. The displayed indications and function of the keys will vary accordingly depending on the operation selected.






How to use Music Shuttle

With au Music Player or EZ • FM active, you can use Music Shuttle to perform operations described below.

Operation	Explanation	
	au Music Player active	EZ • FM active
	Press Music Shuttle Pause or play back Operations in the idle screen Hold down (1 second): Start Shuttle Player (play back) Operations during BGM playing End au Music Player	
	Turn Music Shuttle Skip to the beginning of the next (or the current) audio file Turn and hold (1 second): First forward or rewind	Turn Music Shuttle Select radio station Turn and hold (1 second): Auto tuning
	Press volume keys Adjust the volume	Press volume keys Adjust the volume

How to use stereo earphone

   With au Music Player or EZ • FM active, you can use stereo earphone to perform operations described below.


Operation	Explanation	
	au Music Player active	EZ • FM active
	Press center End au Music Player Operations in the idle screen Start BGM playing Operations during BGM playing End au Music Player	Hold center down (1 second) End EZ • FM Operations in the idle screen Hold center down (1 second): Start EZ • FM
	Press left and right Skip to the beginning of the next (or the current) audio file Hold down (1 second): First forward or rewind	Press left and right Select radio station Hold down (1 second): Auto tuning
	Press up and down Adjust the volume	Press up and down Adjust the volume

Opening/Closing W42S

To open W42S, slide the front part (with the screen on) upwards;
or slide it downwards to close W42S.



When you open W42S, do not touch any key. Otherwise, it may cause malfunction.

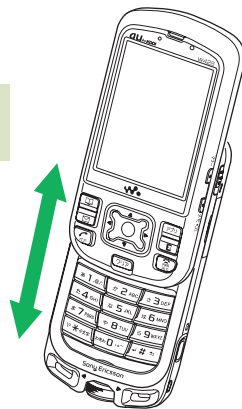

Turning the power on

1


Hold down  for at least one second.








Retrieving card (UIM) info (user operation is disabled)

Check the remaining battery power.


			
Fully charged	Medium	Low	Fully discharged

- Charge the battery pack when the power is low.
-  appears during charging.

Check the reception strength.

				
Strong	Medium	Weak	Very weak	Out of service area

- You cannot receive or make calls when "圏外" (Out of service area) is displayed.
- You may not be able to receive or make calls when "T" (Very weak) is displayed.

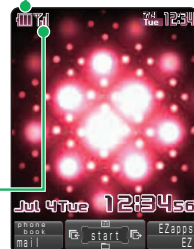

(the idle screen)

■ ■ To turn the power off

Hold down  for at least two seconds.






Default settings

The followings are set by default.


Chg Lock No. (Change Lock No.)	1234	Font size	EZweb font:Large font
Caller ID	ON		E-mail font:Large font









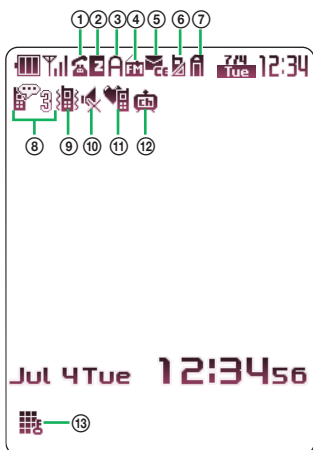







Before using English display

■ ■ To set English display

- ① Press  (スタート) in the idle screen → press  .
- ② Use  and  to select "English."

How to read the display



Icon	Description
① 	During a call
② 	While you are using EZweb
	While you are using Hello Messenger
③ 	While you are using EZ apps
	While you are using PC site viewer
④ 	While you are using EZ · FM
	While you are using au Music Player
⑤ 	When mail was received but not yet read
⑥ 	When there is a missed call
⑦ 	When the "Memory Stick Duo" (sold separately) is inserted
⑧ 	While record message is set The number of recorded messages (1 to 3)
⑨ 	When the vibrator is set to "ON"
⑩ 	When the ring volume is set to "OFF"
⑪ 	While the manner mode is set
⑫ 	When an EZ Channel program is registered ("NEW" is displayed when a program is updated.)
⑬ 	While keylock is set

Using the Main menu


You can access "Main menu" by pressing  (start) in the idle screen to use various settings and menus. Use  and  for operation.

In the idle screen





Press  (start) to display the Main menu.

Select from the Main menu

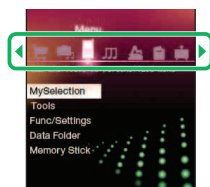

Horizontal

 

Press  to select a category.



Shopping&Auctions

Shopping&Auctions



au ShoppingMall



au Auctions



au Records



au Books



Entertainment

PC site viewer



Hello Messenger



Camera



EZ · FM



TV program guide



Menu

MySelection



Tools



Func/Settings




Data Folder






Memory Stick

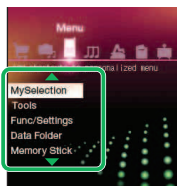

 The default menu color and design varies by W42S body color. The menu color and design also changes depending on the time frame.



Vertical

Press  to select an item.Use  to select the itemPress  (select) to select the item.**au Music**▼
au Music Player

EZ Music!



Music Folder

**EZnavi**▼
EZnaviwalk

PassengerSeatNavi



Position Search



Area Message



EZnavi Portal



Settings

**EZ Book**▼
EZ Book Land!

EZ Book List



Book Folder

**EZchannel**▼
Message

Registered Program



Program Guide



Update Check



Multi Folder



Settings

Initial settings for e-mail and EZweb

If you subscribed to the EZweb service, make the following initial settings.

1

Press  (mail) in the idle screen.



EZwebを利用するための初期設定を行います
PCサイトビューアの初期設定も行われます
「OK」を押してしばらくお待ちください

2

Press  (ok).



ただいま初期設定を行っています。

しばらくお待ちください
程度かかります

ようこそEZwebへ
お客様のEメールアドレスは、
△△△@ezweb.ne.jp
です。

3


 
Press  (OK).

The E-mail menu appears.



E-mail
1 Create new
2 Inbox
3 Outbox
4 Check new mail
5 Friend box
6 Info box
7 Settings



You can also initialize the settings by pressing  (EZ) or  (EZapps).



Your e-mail address is automatically determined when you initialize the settings.


If you have not subscribed to EZweb service yet,

Contact an au shop or Customer Service Center. You need to subscribe to the EZweb service to use e-mail, EZweb or other EZ services.

Confirming your cellphone number/e-mail address

1


Press  (start) in the idle screen.

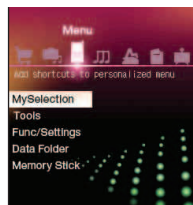





2

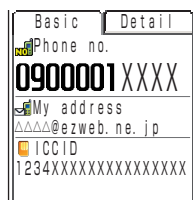Press .


You can confirm your cellphone number and e-mail address.



 You can also confirm your cellphone number and e-mail address by pressing  (start) in the idle screen, and use  and  to select "Func/Settings" → "Profile."




Changing your e-mail address


 
e-mail address

Example : @ezweb.ne.jp

Changeable part Domain


1

Press  (mail) in the idle screen. Press  to select "Settings," and press  (select).

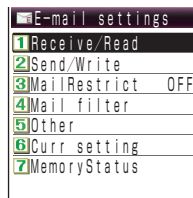





2

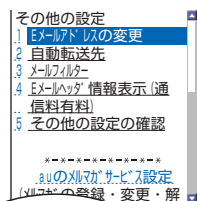 Press  to select "Other," and press  (select). Press  to select "Yes," and press  (select).






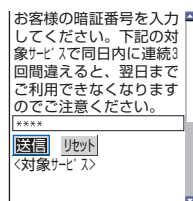
 
3

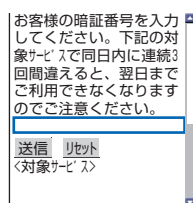

Press  to select "Eメールアドレスの変更," and press  (Select).



4


 
Press  to select the input field, and press  (Edit). Enter your security code, and press  (ok).






-  Security code is the 4-digit number that you wrote in the application form when subscribing.
-  Note that no setting operation is allowed until the following day if you enter the wrong security code three times a day.



5

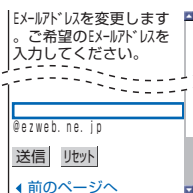Press  to select "送信,"
and press  (Select). Press
 to select "承諾する,"
and press  (Select).



6

 
Press  to select the input
field, and press  (Edit).
Enter the text before @, and
press  (ok).

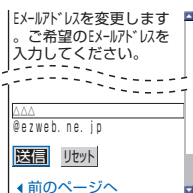

For details on how to input e-mail addresses, see page 35.

7

Press  to select "送信,"
and press  (Select).

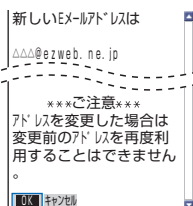

When the e-mail address cannot be changed

The e-mail address that you entered is already used. Enter a different e-mail address.

8

Press  to select "OK,"
and press  (Select).





For details on how to confirm your e-mail address, see page 23.

Phone call

Making a call

1

Press  to  to enter the other party's phone number.



030001XXXX

12345...



To call a regular phone, enter the phone number starting with the area code.

To notify the other party of your cellphone number

Enter "186" before the cellphone number of the other party.

Not to notify the other party of your cellphone number

Enter "184" before the cellphone number of the other party.


2

Press .





CALLING








When you have finished the call, press .




Receiving a call

1

Press  or  (call) to answer the call.










Duration



4



 When you have finished the call, press .


Phone call


The display when you receive a call

Phone number	When the other party has set to notify Caller ID ※If the other party's name and phone number is already saved in the phone book, that person's name is also displayed	 Susan Jones 0900001XXXX
"ID Unsent"	When the other party has set not to notify Caller ID	 Incoming call ID Unsent
"Payphone"	When you have received a call from a payphone	
"Not support"	When you have received a call from a party that is not able to notify Caller ID	

The display if you are unable to answer a call

If you are unable to answer a call, you are notified that you had a call on the display.

If you press  (select), you can confirm the phone number of the other party that called you and redial that party.







The image shows a missed call notification on a mobile phone screen. At the top, there is a status bar with signal strength, a green circle with a white 'B', and the time 12:34. Below the status bar, the text 'Missed call' is displayed in white on a black background. At the bottom, the date and time 'Jul 4 Tue 12:34' are shown in red.

27

Redialing the number (Dialed/Received)

1



Press  in the idle screen.

-  : Display Received calls.
 : Display Dialed calls.





Received	Dialed
1 Jul 4 11:05	030001XXXX
2 Jul 3 10:00	030004XXXX
3 Jul 3 9:00	
4 Jul 2 22:00	
John Smith	

Icons of Received calls

- : The call that you did not answer (missed call)
: The call within three seconds (one-ring call)

2

Press  to select the phone number you want to call, and press .



The call is connected to the phone number you selected.






In each memory, the phone numbers of the latest 30 calls will be saved.

Changing the volume during a call

1

Press  during a call.


- : The volume increases (Level 1 to 5).
: The volume decreases (Level 5 to 1).

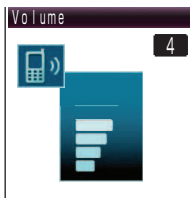





Setting the manner mode


The W42S vibrates to notify you of incoming calls.

1

Hold down マナー  for at least one second in the idle screen.

The manner mode is set, and ,  and  appear in the display.

At the same time, record message is set, and  appears in the display.

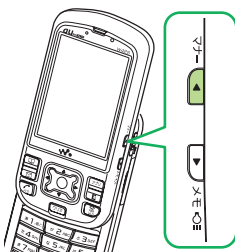

To cancel the manner mode

Hold down マナー  for at least one second in the idle screen.




There are four types of manner settings: "Manner," "Silent," "Drive" and "Original."

Changing the volume and tone of the ringtone



Example: When setting a "preset" ringtone



1

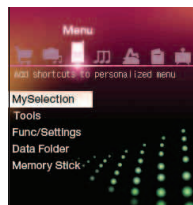Press  (start) in the idle screen. Press  to select  (Menu).





 
2

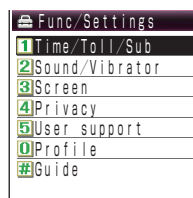Press  to select "Func/Settings," and press  (select).





3

Press  to select "Sound/Vibrator," and press  (select).

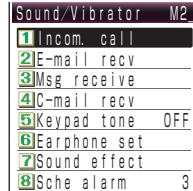



4

 Press  to select "Incom. call," and press  (select).

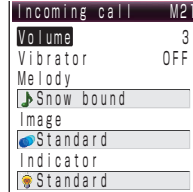





5

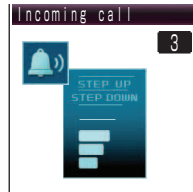 Press  to select "Volume," and press  (select).





 6

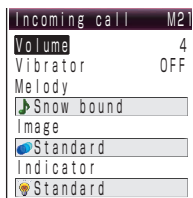Press  to adjust the volume, and press  (ok).




- "OFF" :The ringtone does not sound.
- "1" to "5" :The ringtone sounds at the level you set.
- "STEP DOWN" :The volume of the ringtone decreases.
- "STEP UP" :The volume of the ringtone increases.

 "STEP DOWN" and "STEP UP" can be selected by pressing  over "5."

7


Press  to select "Melody," and press  (select).

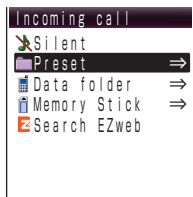




 "Snow bound" is set by default.

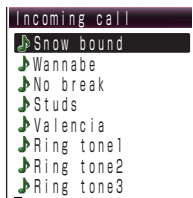

8

Press  to select "Preset," and press  (select).



-  If you press  (play), the ringtone you selected plays back.
- If you press  () while the ringtone is being played, the ringtone stops playing.


 
9


Press  to select a ringtone, and press  (save).







Setting the record message


1

Hold down   for at least one second in the idle screen.

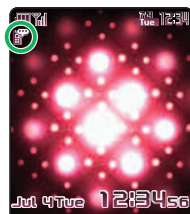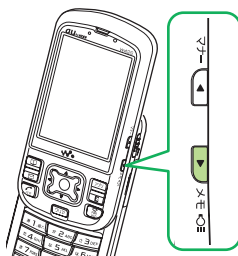Record message is set, and  appears in the display.







 You can also use the record message to record a message from the other party by pressing  (memo) while receiving a call.

 You can record up to three messages within 20 seconds each.

To cancel record message


Hold down   for at least one second in the idle screen.

 If the record message still contains any message,  remains in the display even after canceling record message.  disappears when record message data is deleted.

 When you turn the power off or when you are in a place where the signal is weak, use Voice Mail.

Playing back recorded messages



When a message is recorded

A message and  (number of recorded messages) appear in the idle screen.






1

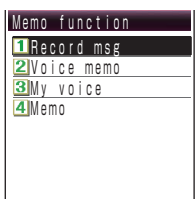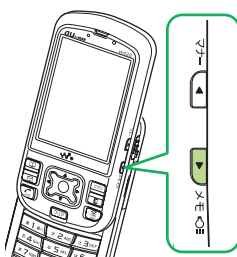Press  in the idle screen.



 
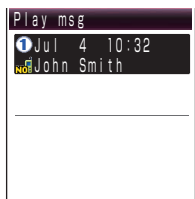
 
2

Press  to select "Record msg," and press  (select).






 
3




Press  to select "Play msg," and press  (select).



4

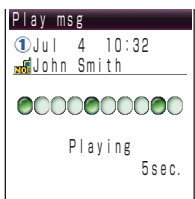Press  to select the recorded message to play back, and press  (play).




 You can delete recorded messages by pressing  (delete) while the recorded message is playing back or by pressing  (delete) after playing the recorded message.

Text input

Changing the input mode

Input text by changing the input modes below.

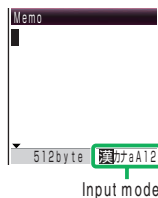

	Press E (mode)	Press アス (😊/smb)
Input mode	漢 :Kanji/Hiragana	😊 :E MOJI
	カ/カ :Kana (double/single byte)	記 :Symbols (double byte)
	A/A :English (double/single byte)	半 :Symbols (single byte)
	1/12 :Number (double/single byte)	顔 :KAO MOJI


1

Press **E** (mode) in the text input screen.



Each time you press **E** (mode), the input mode changes to Kanji/Hiragana → Kana → English → Number → Kanji/Hiragana...

Pressing **A/A** in the Kana, English, or Number mode changes the byte (double/single).

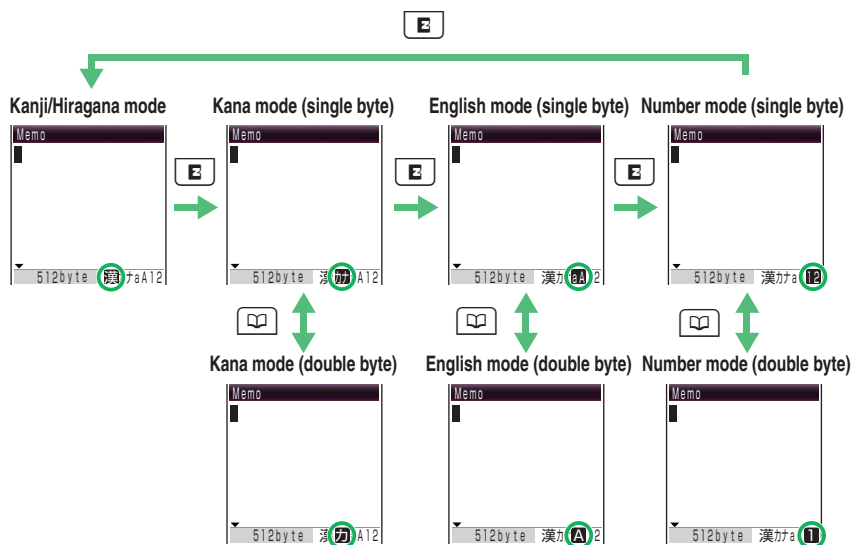

The input mode that you can select is different depending on the current input screen.



 

 

 
For details on how to input pictorial characters, symbols and emoticons, see page 38.

Inputting text


 



 
 





To input alphanumerics


Change the input mode to the English mode (page 34).


In the text input screen, press the keys as described in the table below.




Example:  →  →  →  →  →  → 
a → b → c → A → B → C → 2
↑

   ◆ Character key assignment table (single byte alphanumerics)

Key	Number of times to press the key												
	1	2	3	4	5	6	7	8	9	10	11	12	13
	.	@	/	:	-	_	~	1					
	a	b	c	A	B	C	2						
	d	e	f	D	E	F	3						
	g	h	i	G	H	I	4						
	j	k	l	J	K	L	5						
	m	n	o	M	N	O	6						
	p	q	r	s	P	Q	R	S	7				
	t	u	v	T	U	V	8						
	w	x	y	z	W	X	Y	Z	9				
	Space	!	?	-	,	'	;	()	"	&	¥	0
	※1	!	?	-	,	'	;	()	"	&	¥	
	※2	Break lines											

  ※1  is also used to switch between uppercase and lowercase of current displayed characters.

   ※2 When you enter the characters by pressing keys,  is used to reverse the order of characters to be appeared (Back Space function).

Example:  →  → 
a → b → a



You can input your e-mail address using up to 30 single bytes alphanumeric in lowercase including "-" (hyphen), "." (dot), and "_" (underscore). You can use "." (dot) in a row.

Note, however, "." (dot) and "0" cannot be used at the beginning of your e-mail address.

Characters and symbols with blue background in the above table cannot be used before @ of "△△△@ezweb.ne.jp."

Inputting text (continued)

Example: To input "tomy1" in the mail address

1

Input the text before @.


t : Press **8 TUV** once.

o : Press **6 MNO** three times and press **OK** once.

m : Press **6 MNO** once.

y : Press **9 WXYZ** three times.

1 : Press **1 ABC** eight times.

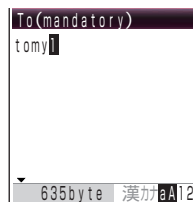

For details on how to input "@ezweb.ne.jp," see page 39.

 


■ ■ To consecutively input characters assigned to the same key

Input the first character, press  and press the next character key.

Example: To input "ab"



■ ■ To input uppercase characters

Example:   
 a → A → a

■ ■ To delete characters

Example: Press  once.

abcd → abcd

Hold down  for at least one second.

abcd → 

(All characters are deleted.)

 
Inputting text (continued)


To input pictorial characters, symbols and emoticons



1

Press  (😊/smb) in the text input screen.



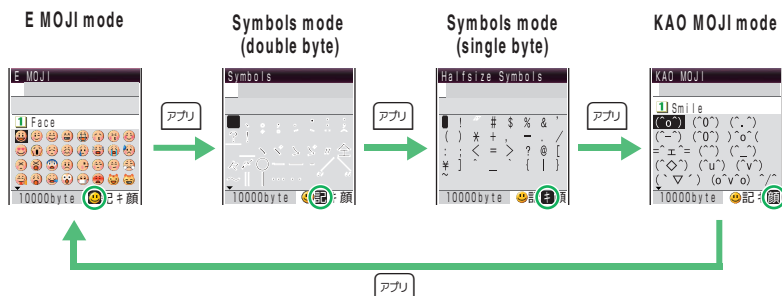


Each time you press  (😊/smb), the input mode changes to
E MOJI → Symbols (double byte) → Symbols (single byte) →
KAO MOJI → E MOJI...




 You can switch categories of pictorial characters or emoticons by pressing  (category) on each selection screen.

2

 Press  to select the icon you want to use, and press  (select).




 The input mode that you can select is different depending on the current input screen.


To input sentences

You can enter your frequently used sentences using our useful sentence list.

Example: To input "@ezweb.ne.jp" in the mail address


1

Press  (option) in the text input screen.

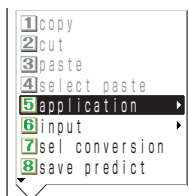




2

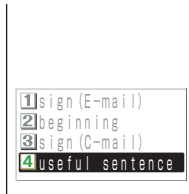Press  to select "input," and press  (select).





3

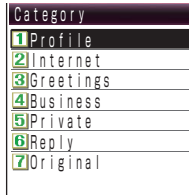Press  to select "useful sentence," and press  (select).






4

Press  to select "Internet," and press  (select).



5

Press  to select "@ezweb.ne.jp," and press  (select).

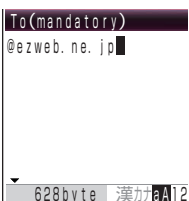


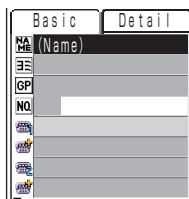
Phone book

You can save up to 1,000 phone numbers or e-mail addresses.



Saving to the phone book

1

Hold down  (phone book) for at least one second in the idle screen.




2

Press  to select **NAME** (Name), and press  (select).



3




Enter the name, and press  (ok).


 
 (JP reading) is automatically entered.




For details on how to enter text, see page 34.



4

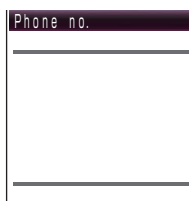
Press  to select  (Phone no.1), and press  (select).





5

Enter the phone number, and press  (ok).

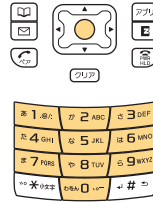


" Mobile" is automatically entered to  (phone type).


 


 When saving a regular phone number, start with the area code.


 To end saving to the phone book, jump to step 8.



6

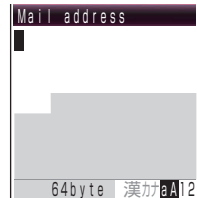

Press  to select  (Mail address1), and press  (select).




7

Enter the e-mail address, and press  (ok).


" Mobile" is automatically entered to  (e-mail address type).

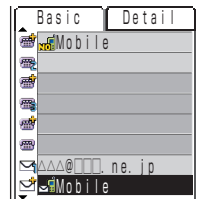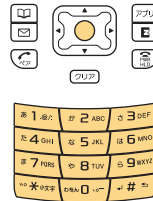

 For details on how to enter e-mail addresses, see page 35.

8

 Press  (cmplt).



 The entry is automatically saved to the smallest available memory number from 000 to 999.

 You can also save other items such as groups, ringtones, postal addresses and birthdays.

Editing the phone book

Example: To edit phone numbers

1

Press  (phone book) in the idle screen.



あかざなはまや
相原太一
青木一郎
赤坂花子
阿部
井田
伊藤
宇野
江口



To switch from the "あ" to "ETC" display lines

 
Press .



たなはまやらわA
Alan Nelson
Brian Miller
Carol Adams
Jane Moore
John Smith
Kate Dickens
Nancy Brand
Ron Edwards

2

Press  to select the entry to edit, and press  (select).



Basic	Detail
Nancy Brand	
NancyBrand	
000	
0900003XXXX	
030002XXXX	
030001XXXX	
△△△@□□□. ne. jp	
□□□@△△△. ne. jp	




3


Press  (edit).



Basic	Detail
Nancy Brand	
NancyBrand	
000	
0900003XXXX	
030002XXXX	
030001XXXX	
△△△@□□□. ne. jp	
□□□@△△△. ne. jp	

4

 Press  to select the item you want to edit (in this case, ) , and press  (select).





Phone no.
0900003XXXX

5

Edit the information, and press



(ok).

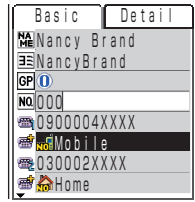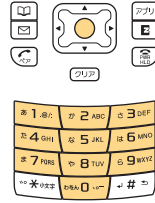


Press **フリパ** to delete a saved character.

To delete all characters, hold down **フリパ** for at least one second.

6

 Press **E** (cmplt).



Making a call from the phone book

1

Press  (phone book) in the idle screen.



あかざたなほまや
相原太一
青木一郎
赤坂花子
阿部
井田
伊藤
宇野
江口



To switch from the "あ" to "ETC" display lines

Press .



たなほまやらわA
Alan Nelson
Brian Miller
Carol Adams
Jane Moore
John Smith
Kate Dickens
Nancy Brand
Ron Edwards



2


Press  to select the person to call, and press  (select).



Basic	Detail
① Nancy Brand	
☎ NancyBrand	
NO 000	
0900003XXXX	
030002XXXX	
030001XXXX	
△△△@□□. ne. jp	
□□□@△△. ne. jp	

3

 Press  to select the phone number, and press .





Nancy Brand
CALLING

Saving from Dialed/Received calls

1



Press  in the idle screen.



-   : Display Received calls.
-   : Display Dialed calls.

	Received	Dialed
1	Jul 4 11:05	030004XXXX
2	Jul 3 10:22	Jane Moore
3	Jul 3 9:35	Carol Adams
4	Jul 2 22:00	John Smith

2

Press  to select the phone number to save in the phone book, and press  (save).



Select way to save to phone book

New
 Add

"New" : Create and save a new address.

"Add" : Add and save newly added information.

3

Press  to select "New," and press  (select).



The phone book edit screen appears. The phone number you selected is automatically entered.



For details on how to save information in the phone book, see steps 2 to 8 on pages 40 and 41.



Pair function


Saving to the pair function

You can save up to three phone numbers (like frequently used ones) from the phone book, and make calls, send mails or use Hello Messenger with a simple operation.

You need to save pair partners to the phone book beforehand. For details on how to save numbers in the phone book, see pages 40 and 41.

1

Press  in the idle screen, press  to display the tab you want to save a partner to.

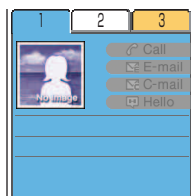




2

Press  (save).



3

 Press  to select the person to save, and press  (save).



Name, Phone no., Mail address and image of the person you selected are saved.

Making a call by using pair function

1

Press  in the idle screen.





 
2

Press  to select the person to call.





3

Press  to select **Call** (Call), and press  (select).




To send mail

Press  to select **E-mail** (E-mail) or **C-mail** (C-mail), and press  (select) in step 3.

-  For details on how to create or send e-mail, see steps 7 to 12 on pages 50 and 51.
-  For details on how to create or send C-mail, see steps 3 to 4 on page 58.

To use Hello Messenger

Press  to select **Hello** (Hello), and press  (select) in step 3.

-  For details on how to use Hello Messenger to invite people to join, see step 5 on page 65.

Mail

Using e-mail

 EZweb subscription required

About e-mail


E-mail allows you to exchange mail with PCs or cellphones that support e-mail. You can send mail of 5,000 double/10,000 single byte characters and photos and movies.

Before using e-mail

- You need to subscribe to the EZweb service to use the e-mail service. Contact an au shop or Customer Service Center if you did not subscribe to the service at the time of purchase.
- Make initial settings before using the e-mail and EZweb services. See page 22 to make initial settings.
- You can send e-mail to up to five recipients at a time.
- You can send up to 1,000 e-mails (including recipients of messages) in one day.
- It may take a short while to send/receive mails when they have attachments.

You can also send e-mails to au and other cellphones.

An e-mail is sent to an e-mail address.
(Example) `△△△@□□□.□□.jp`

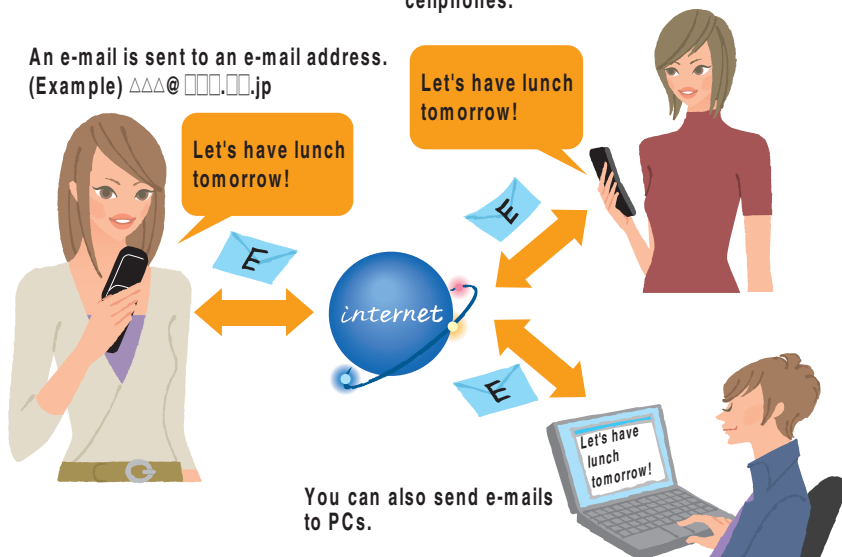


You can also send e-mails to PCs.

Creating and sending e-mail



1

Press  (mail) in the idle screen.

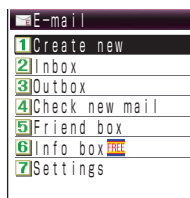


2

 Press  to select "Create new," and press  (select).

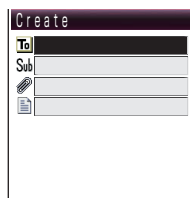

Icons




 (Address) : The e-mail address of the recipient


 
 (Subject) : The subject of the e-mail

 (Attachment): The data attached to e-mail

 (Main text) : The main text of the e-mail

3

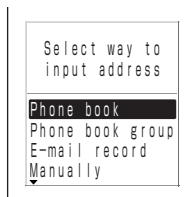

Press  to select  (address), and press  (select).



There are three types of destinations: To, Cc and Bcc. You can send e-mail to up to five destinations at a time (up to 640 single byte characters including To, Cc and Bcc).

Creating and sending e-mail (continued)

4

Press  to select "Phone book," and press  (select).





 
あかざなはまや
相原太一
青木一郎
赤坂花子
阿部
井田
伊藤
宇野
江口



You can select an address from sent/received messages or enter an address manually.



5


Press  to select a person you want to send an e-mail to, and press  (select).



Basic	Detail
① Nancy Brand	
NancyBrand	
NO 000	
△△△@□□□. ne. jp	
□□□@△△△. ne. jp	



 6

Press  to select an e-mail address, and press  (select).



Create
To Nancy Brand
Sub

7

 
Press  to select Sub (subject), and press  (select).



Subject
100byte 漢力aA12

8

Enter the subject, and press  (ok).





1 ①	2 abc	3 DEF
4 ghi	5 jkl	6 mno
7 pqrs	8 tuv	9 wxyz
* 0 123456789	#	

Create
To Nancy Brand
Sub Tomorrow's meeting



9

 Press  to select  (main text), and press  (select).

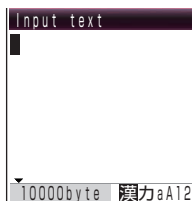


10

 Enter the main text, and press  (ok).

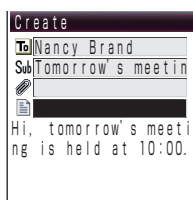


11

Press  (send).

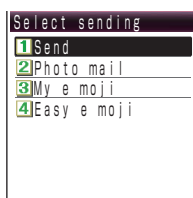

12

 Press  to select "Send," and press  (select).



The e-mail is sent.

Opening a received e-mail

When you receive an e-mail

A message and  appear in the idle screen.




1

Press  (select).






Icon

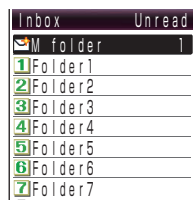: The folder containing new mail



2

 
Press  to select the folder containing new mail, and press  (select).



Icons


: The "read mail" that has already been read

: The "unread mail" that has not yet been read

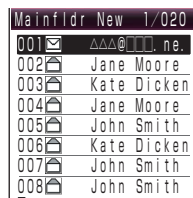



3

 Press  to select the new mail, and press  (viewer).



How to view received mail

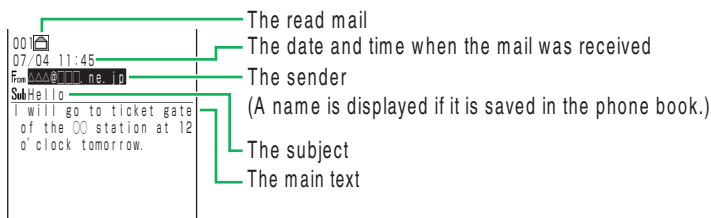

 Hold down  for at least one second to change the font size.




Press  or  to return to the received messages.

To open an e-mail in the Inbox

1

Press  (mail) in the idle screen.

Icon


: The "unread mail" that has not yet been read
The number on the right side is the number of unread mails.



E-mail	
1 Create new	
2 Inbox	1
3 Outbox	
4 Check new mail	
5 Friend box	
6 Info box	
7 Settings	



 2

 
Press  to select "Inbox," and press  (select).











Inbox Unread	
M folder	1
1 Folder1	
2 Folder2	
3 Folder3	
4 Folder4	
5 Folder5	
6 Folder6	
7 Folder7	



3


Press  to select the folder containing the mail you want to read, and press  (select).




Mainfldr New 1/020	
001  ΔΔΔ@ΔΔΔ.ne.	
002  Jane Moore	
003  Kate Dicken	
004  Jane Moore	
005  John Smith	
006  Kate Dicken	
007  John Smith	
008  John Smith	

4

 Press  to select the mail you want to read, and press  (viewer).



001 
07/04 11:45
From ΔΔΔ@ΔΔΔ.ne.jp
Sub Hello
I will go to ticket gate
of the ○○ station at 12
o'clock tomorrow.



Replying to a received e-mail

 
1

See steps 1 to 4 in "To open an e-mail in the Inbox" (page 53) to display the e-mail to reply.


001
07/04 11:16
From Kate Dickens
Sub Meet with you
Tomorrow morning I'm waiting in the square in front of the ΔΔ station.

2

Press  to select From (sender) or Sub (subject), and press  (reply).





Create
To Kate Dickens
Sub Re: Meet with you
Tomorrow morning I'm waiting in the square in front of the ΔΔ station.

 Sub (subject) is prefixed with "Re:," and the main text of the e-mail is quoted.

3

 Press  to select  (main text), and press  (select).



Input text
Tomorrow morning I'm waiting in the square in front of the ΔΔ station. 
9926byte 漢力aA12




4

 
Input the main text, and press  (ok).



Create
To Kate Dickens
Sub Re: Meet with you
Thanks for your mail.
I'm looking forward to seeing you.

5

Press  (send). Press  to select "Send," and press  (select).



The e-mail is sent.

Reading e-mails with photo or movie attached

Example: To read an e-mail with a photo attached

1

See steps 1 to 3 in "Opening a received e-mail" (page 52) to view a mail.


Icon



 
:An image attached to the mail

```
001 [icon] [icon]
07/04 10:47
From: AAA@BBB.ne.jp
Sub: Hello
I send you a picture I t
ook in the park.
[icon] (28KB) 060702_1044~01. j
pg
```

2

Press  to select a file name, and press  (recv).

When the file is received, the photo is displayed.







```
001 [icon] [icon]
07/04 10:47
From: AAA@BBB.ne.jp
Sub: Hello
I send you a picture I t
ook in the park.
[icon] (28KB) 060702_1044~01. j
pg
```

Receiving
attached data



 Press  to select a photo, and press  (view) to display the entire photo on the screen.

 Depending on the size of photo or movie, you can display a file in step 1, or display by pressing  to select a file name and press  (play) in step 2.

 It may take a short while to send/receive mails depending on the data attached to them or the reception strength of the place you are in.

Filtering spam

We recommend that you set our mail filter function to block spam.

We, KDDI Corporation, launched a new service to provide some tips to help you choose from our mail filter options.

Setting the mail filter

Example: To access the Supportive setting

- 1 Press (mail) in the idle screen, and use and to select "Settings" → "Mail filter."
- 2 Use and to select "Yes" → "次へ."
- 3 Enter your security code and use and to select "送信."

Then, follow the on-screen instructions.

Simple settings

サポート設定 Supportive setting

You can set your mail filter preferences by answering our questions.

This is highly recommended for those who want to confirm one's preferences step by step.

フィルターレベル(高) Filter level (Strict)

You can block the all incoming e-mails from PC.

This is highly recommended for those who use e-mail only between cellphones.



フィルターレベル(中) Filter level (Moderate)

You can block the incoming e-mail from specified sender.

This is highly recommended for those who have troubles with spam sender.

フィルターレベル(低) Filter level (Normal)

You can block the incoming e-mail containing "未承諾広告※" in its title, and "なりすましメール." This is highly recommended for all e-mail users.

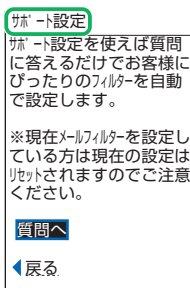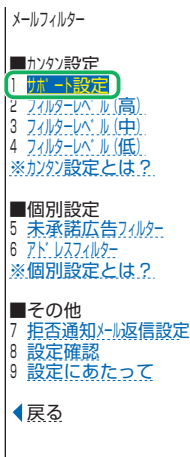


By changing your e-mail address, you can prevent spam from being received. For details on how to change e-mail address, see pages 24 and 25.

Using C-mail

■ ■ About C-mail

C-mail allows you to exchange mail among other au cellphones that support C-mail using cellphone numbers. You can send C-mail of 50 double/100 single byte characters.

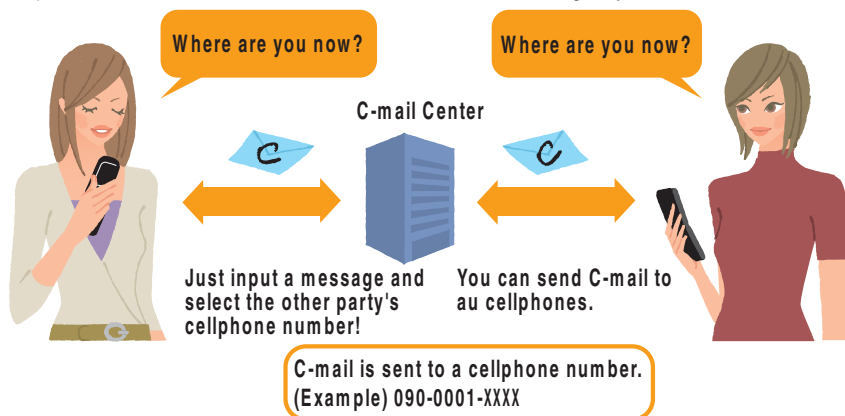


■ ■ C-mail safe block function


C-mail safe block function allows you to reject C-mails that include URL (<http://△△△>, <https://△△△>) or phone numbers in the C-mail main text.

C-mail safe block function is valid by default. You can cancel the setting to receive C-mails that include URL or phone numbers.

Creating and sending C-mail



1

Hold down  (mail) for at least one second in the idle screen.

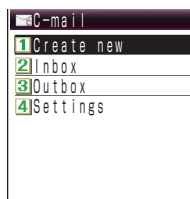



2

 Press  to select "Create new," and press  (select).

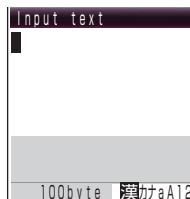


3

 Enter the main text, and press  (ok).

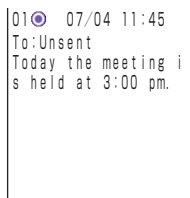




4

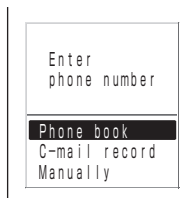Press  (send).



5

 Press  to select "Phone book," and press  (select).






あ	か	さ	た	な	は	ま	や
相	原	太	一				
青	木	一	郎				
赤	坂	花	子				
阿	部						
井	田						
伊	藤						
宇	野						
江	口						



You can select a phone number from sent/received messages or enter a phone number manually.



 6


Press  to select a person you want to send a C-mail to, and press  (select).



Basic	Detail
① Nancy Brand	
③ NancyBrand	
NO 000	
④ 0900003XXXX	
⑤ 030002XXXX	
⑥ 030001XXXX	

7

 Press  to select a phone number and press  (select).



Nancy Brand
0900003XXXX
Send

8

Press  (select).



The C-mail is sent.

Opening a received C-mail


When you receive a C-mail

A message and  appear in the idle screen.




1

Press  (select).

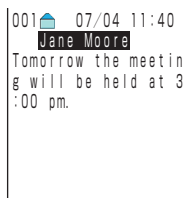

To open a C-mail in the Inbox

1

Hold down  (mail) for at least one second in the idle screen.



C-mail	
1	Create new
2	Inbox 1
3	Outbox
4	Settings

Icon

 






:The "unread mail" that has not yet been read

The number on the right side is the number of unread mails.



2


Press  to select "Inbox," and press  (select).




Inbox	New	1/005
001		07/04 11:40
	Jane Moore	
002		07/03 10:00
	John Smith	
003		07/03 9:32
	Ron Edwards	
004		07/02 10:30
	John Smith	

3

 Press  to select the C-mail you want to read, and press  (viewer).






001		07/04 11:40
	Jane Moore	
Tomorrow the meeting will be held at 3:00 pm.		

Hello Messenger

What you can do with Hello Messenger

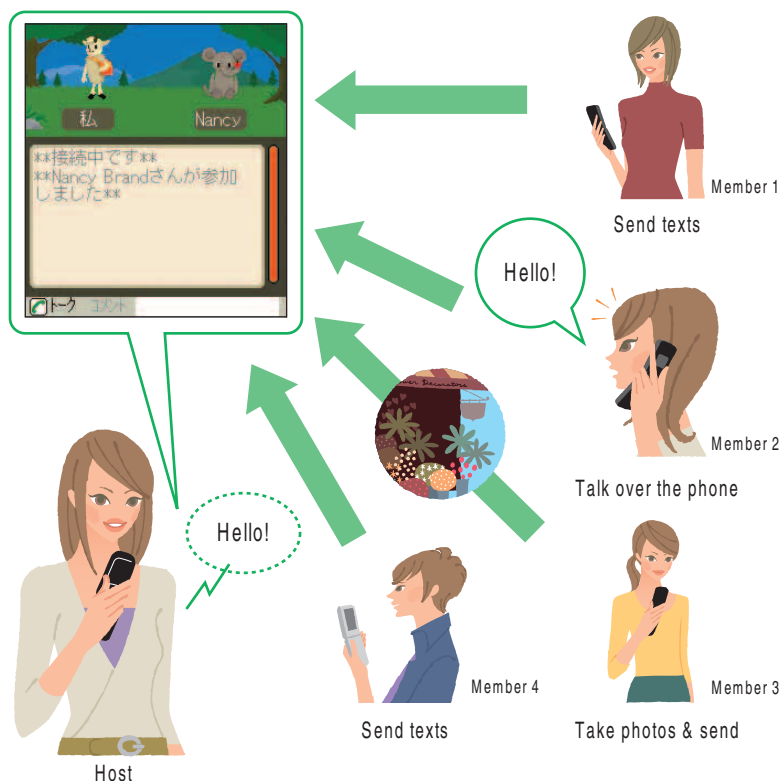

Hello Messenger is like a portable private chat room service for au cellphones supporting this service. Hello Messenger allows you to send text, sounds, and photos to all the members in real time. Each member can select his/her original cartoon-style character. The host can pick up 4 members maximum from the phone book memory.




-  According to the conditions such as frequent use, your location, or reception strength, battery may be discharged sooner than usual.
-  The fixed number of members for this service are 2 to 5.



Displaying Hello Messenger menu

1

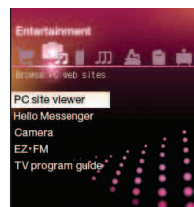



Press  (start) in the idle screen. Press  to select  (Entertainment).



2

Press  to select "Hello Messenger," and press  (select).



 When you use Hello Messenger for the first time, press  (OK). You can set your character from the below list. Press  to select your character, and press  (設定).

Character list




You can choose your character from these 12 original characters.

 


Inviting members to join



You can invite the members saved in the member list to start chatting.


1

Press  (start) in the idle screen, and press  to select "Hello Messenger," and press  (select).






2

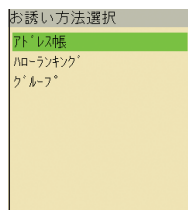Press  to select "スタート," and press  (選択).



3


Press  to select "アドレス帳," and press  (選択).

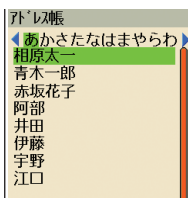


 See page 44 to register the members from phone book.

4

 
Press  to select the members to register, and press  (選択).




The member list appears.

 You can register 5 members maximum including your own name in the member list. Your name is shown on the top of the list (or "私" is shown when your name is not registered in the profile). Your name or "私" cannot be changed or deleted.

 To add the member, select the blank field highlighted, repeat steps 3 to 4.

 Press  (お誘い).





The member saved in your member list gets an invitation message. When you see "〇〇さんが参加しました"(〇〇 joined) appears on your display, you can start chatting with the joined member.

 


You can register members from "ハローランキング"(hello ranking) or "グループ"(group).

When you receive an invitation from other members



When you receive an invitation from other members, the ringtone sounds or your cellphone vibrates. On your display, the message asking you to chose "参加"(join) or "不参加"(not to join) appears. When you set "着信モード"(incoming mode) to "自動応答モード"(auto response), no ringtone sounds, and you can start chatting without any operation.

Press  in the incoming screen to select "参加," and press  (OK) to start chatting.



In the incoming screen, you can see the host's name, total number of the attending members, and the incoming time.



When you chose not to start chatting, press  to select "不参加"(not to join), and press  (OK).



With the manner mode set, no ringtone sounds from speaker or stereo earphone.



Even with the manner mode set, vibrator setting for "ハロー一着信音"(the ringtone for Hello Messenger) has the priority over the manner mode.

Camera

The W42S has a 1.25 Megapixel camera and allows you to take photos and record movies.

What you can do with the camera

You can have fun with photos and movies on the W42S.

You can set photos you have taken as the image for the idle screen, or display them when you have an incoming call, or save photos or movies to the phone book.



You can mail photos and movies.

You can send images up to 500 KB* by attaching to an e-mail.

- The VGA, SXGA format is ideal for using photos on PCs.
- ※ It may take a short while to send/receive mails depending on the reception strength of the place you are in.



Page
73

You can print out photos or browse them using a PC.

You can save photos you took in the "Memory Stick Duo" (sold separately) and print them out with a printer or at a DPE shop, or browse them using a PC.




Successful taking of photos/movies

How to hold the W42S


To take "QVGA" or "QQVGA" photos



To take "VGA," "SXGA" photos or record movie

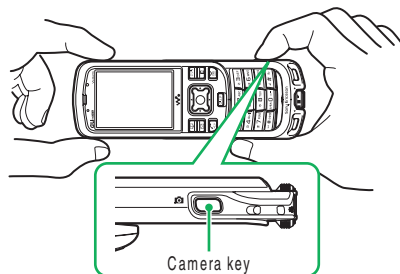

To take photos with W42S closed

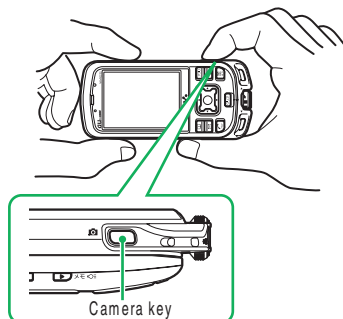

How to set the W42S

- ① Hold your bent arm tight against your body.
- ② Hold the main unit not to shake it.

If your armpits are open or your arms are stretched, the main unit may move and it may cause a blur.

- ③ Be sure not to cover the lens with your fingers.

To stabilize the shot

- ① Do not move the main unit.


Do not move the main unit since you press the shutter until the shutter sound stops. Be careful especially when you shoot in the dark.

- ② Use self-timer


You can prevent a blur caused by pressing the shutter.

Taking photos

1


Press  (camera key) on the side of your cellphone in the idle screen.

The photo monitor screen appears.

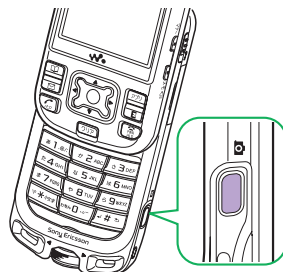

2

View the subject you want to take on the photo monitor screen.

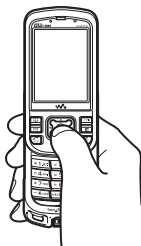

3

Press  (shoot).

You hear the shutter sound, and the photo you have taken is displayed (preview screen).



You can also take photos by pressing  (camera key) on the side of your cellphone.


Press  (save).



Saved in
data folder

"Saved in data folder" appears, and the display returns to the monitor screen.

 You can also save photos by pressing  (camera key) on the side of your cellphone.

 Photos are saved in the "Photo folder" of the data folder. Each photo is titled as follows:


Example of a photo title

060704_1245~02

Date: July 4, 2006

Time: 12:45

Serial number: 2nd photo

 There are four photo shoot modes: "QVGA," "QQVGA," "VGA" and "SXGA."

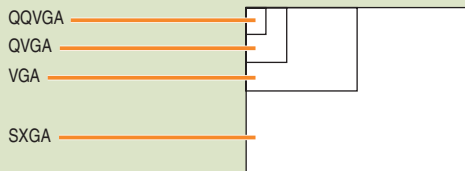



Photo titles are different from the above if "VGA" or "SXGA" photos are taken.

About the "Memory Stick Duo" (sold separately)


If you take photos with "VGA" or "SXGA" by inserting the "Memory Stick Duo" in the W42S, the images are saved in the "DigiCame folder" in the "Memory Stick Duo."


Recording movies

1

Hold down  (camera key) on the side of your cellphone for at least one second in the idle screen.



The movie monitor screen appears.

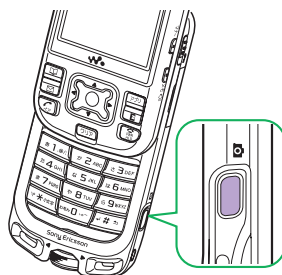

You can also display the movie monitor screen by pressing  (movie) in the photo monitor screen.


2



Hold the W42S horizontally with both hands. View the subject you want to take on the movie monitor screen.

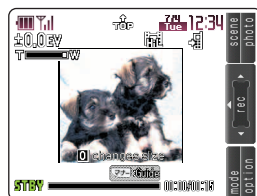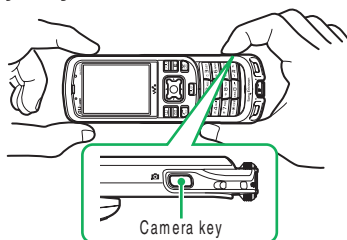

3

Press  (camera key) on the side of your cellphone.

You hear the shutter sound, and  blinks when recording starts.

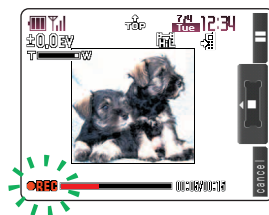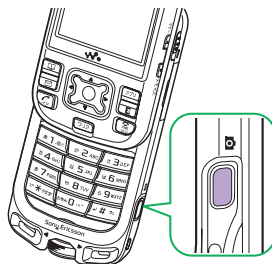



You can also record movies by pressing  (rec).

To cancel recording

Press  (cancel).

To stop recording

Press  (camera key) or  (■).

The first recorded screen is displayed vertically (preview screen).



4

"Saved in data folder" appears, and the display returns to the movie monitor screen.

Saved in
data folder

 Movies are saved in the "Movie folder" of the data folder.

Each movie is titled as follows:

 
Example of a movie title

060704 1245~02

Date: July 4, 2006

Time: 12:45

Serial number: 2nd movie

 There are five movie record modes: "Standard S," "Standard M," "High quality M," "High quality L" and "Video QVGA."

Standard S

Standard M, High quality M

High quality L

Video QVGA

Movie titles are different from the above if "Standard S" movies are recorded.

About the "Memory Stick Duo" (sold separately)

If you record movies with "Video QVGA" by inserting the "Memory Stick Duo" in the W42S, the images are saved in the "Movie folder" in the "Memory Stick Duo."

Viewing photos/movies you have taken



1

Press  in the idle screen.



Data folder	
Data disp	42
User folder	⇒
Private folder	
Movie folder	⇒
Photo folder	⇒
Music	⇒
Sound	1
Multi folder	1

2

Press  to select "Photo folder" or "Movie folder," and press  (select).

 







Photo folder	
Data disp	36
07/04 Tue	9
07/03 Mon	27



3


Press  to select the date folder containing the photo or movie you want to view, and press  (select).



07/04 Tue	
	060704_0945~03 06/07/04 09:45
	060704_0945~02 06/07/04 09:45
	060704_0945~01 06/07/04 09:45


4


Press  to select the photo or the movie you want to view/play, and press  (view/play).

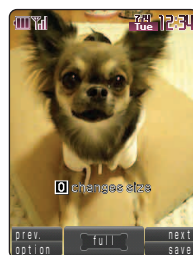

Attaching a photo/a movie to e-mail

1


Press  (E-mail) in the preview screen immediately after you have taken the image.

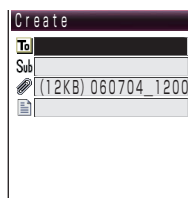

The create screen appears.

For details on how to create and send e-mail, see steps 3 to 12 on page 49 to 51.



The photo or the movie you have taken is automatically attached to an e-mail  (attachment).






"Other phone cannot play size over case happen" may appear. Press  to select "Attach on," and press  (select).

Photo mail

You can use "Photo mail" to automatically convert and send images so that they can be viewed properly on other cellphones even when the other party is not using an au cellphone.

To use Photo mail, you must convert the other party's e-mail address to a Photo mail address.

If you select "Photo mail" for the automatic address converting function when sending an e-mail, the other party's e-mail address is automatically converted (as shown below) before sending.

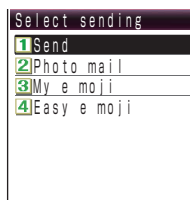

Other party	E-mail address	New address
DoCoMo	△△△@docomo.ne.jp	△△△@d.nepm.jp
Vodafone	△△△@□.vodafone.ne.jp	△△△@□.vodafone.nepm.jp
TU-KA and au phones that do not support Movie mail	△△△@ezweb.ne.jp	△△△@ezweb.nepm.jp

※□ varies depending on the area.




"Photo mail," "My e moji," "Easy e moji" are the automatic address converting functions same as described above.

For using "Easy e moji" (free) or "My e moji" (paid) services, you need to subscribe to the EZweb contents, "絵文字め〜る."

About EZweb


You need to subscribe to the EZweb service to use the EZweb service. Contact an au shop or Customer Service Center if you did not subscribe to the service at the time of purchase. Make initial settings before using. If you have not made initial settings yet, see page 22. EZweb is an information service that allows you to enjoy the Internet on your cellphone. With EZweb, you can obtain Chaku-Uta-Full® (full songs), the latest news, and other contents from information sites.

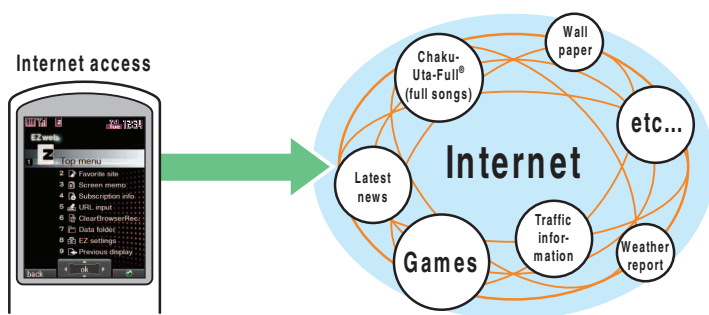

Displaying the EZ Top menu

1



Press **[E]** (EZ) in the idle screen.

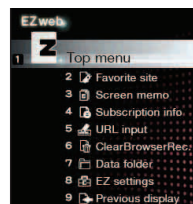

Press **[E]** (EZ) in the EZmenu, and you can access to "SonyEricsson@ez."

2

 Press **[Up]** to select "Top menu," and press **[OK]** (ok).

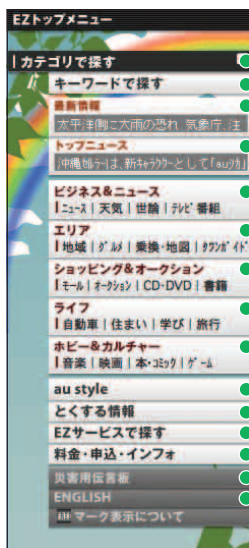

①	Searches for a site by category
②	Searches for a site with a keyword
③	Introduces the list of new special features or contents started at EZweb
④	Provides the automatically-updated latest news
⑤	Provides the latest information such as news, weather, stock prices, and other information beneficial for business
⑥	Provides such information as weather or map by districts
⑦	Provides information about shopping malls where you can purchase goods with your cellphone and the information about the auction where you can put up or go for easily
⑧	Provides information beneficial for daily life
⑨	Provides the latest information about games, fortune-telling, music, e-book, and information on hobby and entertainment trends
⑩	Introduces au-recommended information and sites
⑪	Provides gifts and beneficial Information exclusively for EZweb service subscribers for free
⑫	Introduces useful and amusing recommended services special to EZweb
⑬	Provides phone bills, procedures, au information, and au on-line manual
⑭	Registers/checks the vital information in disasters
⑮	Introduces English sites

It may take a short while for each screen to appear.


The screen layout and contents are just an examples. These are subject to change.

Saving your favorite sites

1

Display the site you want to save, and press


 (Browser Menu).

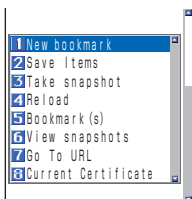

2

Press  to select "New bookmark," and press

  (Select).



3

Press  (cmplt).




You can save up to 100 sites in the Favorite site. However, some sites may not be saved.

Viewing a site saved to the Favorite site


1

Press **[EZ]** (EZ) in the idle screen.

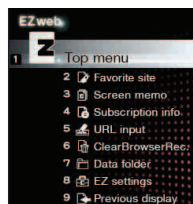


2

Press **[Up/Down]** to select "Favorite site," and press **[OK]** (ok).

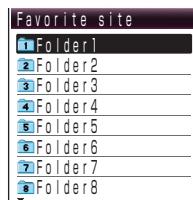

3

 Press **[Up/Down]** to select a folder, and press **[OK]** (select).



4

Press **[Up/Down]** to select the site you want to view, and press **[OK]** (select).




Confirming your call costs

You can confirm call and communication charges.


1

Press  (start) in the idle screen.

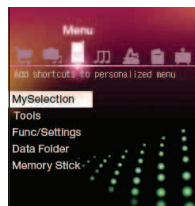


2

Press .

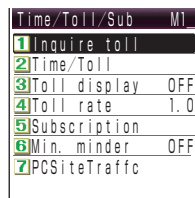

3


Press .

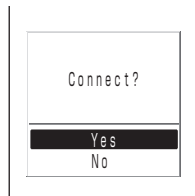

4

Press  to select "Yes," and press  (select).

 Select the item you want to confirm.



Downloading a Chaku-Uta®(ringtone)

Example: To download a Chaku-Uta® (ringtone) and specify it as an ringtone


 
1

Press **[E]** (EZ) in the idle screen.





2

Press **[Up]** to select "Top menu," and press **[OK]** (ok).

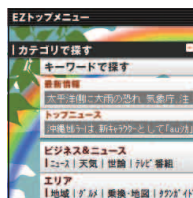



3

 Press **[Up]** to select "カテゴリで探す," and press **[OK]** (OK).

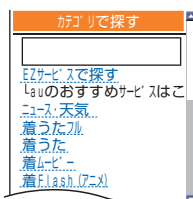




4

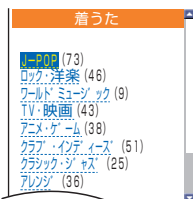 Press **[Up]** to select "着うた," and press **[Select]** (Select).



5

 Press  to select the desired site, and press  (Select).



Follow the on-screen instructions to select the melody you want to download.



When the additional information fee is charged to use the site, you must enter your EZ password or Premium EZ password.

EZ password:

4-digit number to be set when you first subscribe to the paid contents

Premium EZ password:


4 to 8-digit number to be set when you first apply to "まとめてau支払い"

Follow the on-screen instructions to enter either of the above passwords. Set the password when using the site for the first time.



6


Select and download a melody.

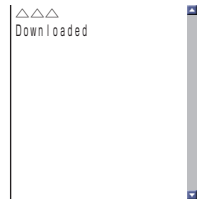Download the melody by following the on-screen instructions.






7

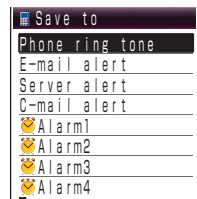When downloading finishes, press  (play) to play back the Chaku-Uta[®](ringtone), and press  (save) while the Chaku-Uta[®](ringtone) is playing.



8

 Press  to select "Phone ring tone," and press  (select).




The downloaded Chaku-Uta[®](ringtone) is specified as the ringtone.

Downloading a Chaku-Uta-Full®(full song)



1

Press  (start) in the idle screen.

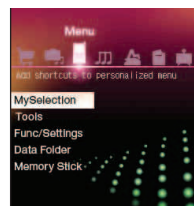




2

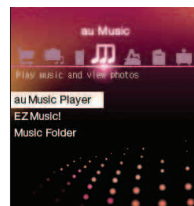 Press  to select  (au Music).



 
 




3

Press  to select "EZ Music!," and press  (select).



Download the Chaku-Uta-Full®(full song) by following the on-screen instructions.

-  You can also download the Chaku-Uta-Full®(full song) by performing the following operation. Press  (EZ) in the idle screen → use  and  to select "Top menu" → "カテゴリで探す" → "着うたフル."
-  The Premium EZ password is needed to register a paid program. Premium EZ password is the 4 to 8-digit number to be set when you first apply to "まとめてau 支払い." Make sure to write down your Premium EZ password and keep it safe.
-  The screen layout and contents are just examples. These are subject to change.

EZ Channel

With EZ Channel, the unique au mobile program, the latest contents are automatically delivered and you can enjoy them just like TV or magazines simply by registering your favorite programs on W42S.

Displaying EZ Channel menu



Enjoying EZ Channel

① Register for the programs you are interested in.

You can register for up to three programs in the "Program Guide."

They are downloaded automatically since late at night to early morning, then saved to the "Registered Program" directory.



② Play back the program.

You can watch the program saved to the "Registered Program" directory anytime.

③ Save the program.

When a registered program is updated, the program is overwritten to old one. You should save the programs you do not want to delete in "Multi folder" etc..

※In some cases, you may not be able to save a program because of copyright protection.


- Be sure to make initial settings before using the EZ Channel. See page 22 to make initial settings.
- EZ Channel downloads a large amount of data (maximum total approximately 5Mbytes), for each program. To use EZ Channel, it is recommended to subscribe to the discount service of the data communications charges.
- When programs arrive, they are automatically downloaded. Keep the battery full and the power turned on within the service area.
- The screen layout and contents are just examples. These are subject to change.

EZ Navi

What you can do with EZ Navi

 EZweb subscription required

EZ Navi is a convenient system based on the geographic (GPS) information.

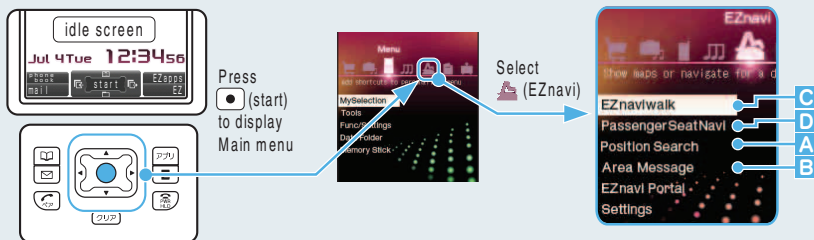

A When you want to know where your child is: "Position Search"

With the operation from W42S, you can check the position of a cellphone supporting "Position Search." There are two kinds of services: "Auto Position Search" (paid), "Position Search Mail" (free).


B When you want to be notified of a specified period of time or area: "Area Message"

First you specify area and time frame. And as the one (for example, your child) enter (or stay)/leave (or are not) there, this feature sends a notice message automatically to another your specified au phone.



C When you go out: "EZ Navi Walk"

You can display various menus convenient for going out.

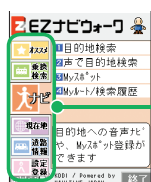

オススメ	Provide new and recommended information ※Experience the demonstration of voice navigation system or voice input function by "おためしナビ."
乗換検索★	Search the train transfer guide and train schedule
ナビ★	Voice navigation service to a destination or registration of "My-Spot"
現在地	Search the map, shops, etc. of the area you are in
道路情報	Search nationwide road information in real time
設定登録	Make various settings and registers memberships

The star symbol shows that you can use your voice to enter search terms. This is called "Voice input" function.

Return home



(Search result display)

Select "ルート案内開始"

→ "はい"



After registering your home location beforehand, you can easily navigate a route to your home from wherever you are.

My-Spot



After registering frequently visited places or your home, this system navigates you to your destination.

View My Map




(Map display)

The result of the first measurement is displayed as ★ on the map. Your current location will be displayed as 人 in real time by successive measurement.

If you simply select "View My Map," a map of your current location appears in real time.

E-mail My Map

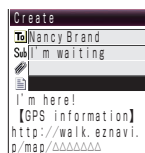

You can inform your partner where you are by mail when you plan to meet him or her.

D When Left front passenger check for driving route information: "PassengerSeatNavi"

Left front passenger can use this feature with W42S to check the route information for the destination on map or by voice.



For the use of EZ Navi, the information fee is charged in addition to the data communications charges.

What you can do with Security Navi

 EZweb subscription required

What you can do with Position Search

When your child does not come home on time and you are worried if your child may be lost, you can confirm his/her geographic location on a map with a simple operation. There are two kinds of "Position Search" services: "Auto Position Search" and "Position Search Mail."

Auto Position Search



Example: When the parent searches the current position of his/her child.

◆ Feature

- When the parent searches where his/her child is, he/she can be notified of where the child is. The child does not have to make any operation.

This service is recommended for little children who are not accustomed to the operations of cellphones.

Note : Monthly fee is charged separately.

Position Search Mail



Example: When the parent sent a mail to his/her child.

◆ Feature

- The parent can send a mail with a message to his/her child.
- The child can confirm the message from the parent and inform him/her where he/she is now.

What you can do with Area Message

First you specify area and time frame. And as your child enter (or stay)/leave (or are not) there, this feature sends a notice message automatically to your W42S.











Area Message



◆ Feature

- The parent can confirm his/her child's safety when the child goes to after school lessons and he/she is worried about the child's way home. The child's cellphone automatically informs the parent's cellphone that the child is taking the usual route.

Example: When the parent confirms the area his/her child is in.

-  "Security Navi" services are available only among the cellphones supporting this feature.
-  To use "Security Navi" services, both cellphones must support this feature, and need to save each other's phone number in their phone book.
-  To use "Security Navi" services, review the terms of service and user agreement, and also set navi password before the first use.
-  In places like underground shopping mall or inside buildings, you may not be able to get accurate location information. Because GPS Satellite signals can be affected by surrounding terrain-buildings, canyon walls, hard ground, etc.; then signals may not be received properly.
-  Area Message may not function properly due to the inaccurate location information obtained by your W42S.
-  You cannot confirm the location if the other cellphone is out of the service area, in some operations, set to reject the call, or without the application.
-  The screen layout and contents are just examples, and may differ from the actual screen.
-  "Security Navi" services are not available, after canceling C-mal service or with EZ apps restriction function.
-  Free calling time provided by your price plan can be applied to EZ apps transmission fees; but family discount of C-mails or discount service of the data communications charges cannot be applied.
-  The data communication is charged separately for obtaining information or displaying map.


au Music

You can enjoy a variety of music with au Music services.

What you can do with au Music

■ ■ To play back audio files

With au Music Player, you can play back audio files, such as downloaded Chaku-Uta-Full® (full song), or transferred data from au Music Port.

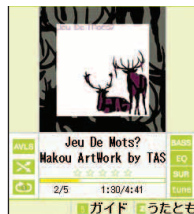

■ ■ Play list

You can save your favorite audio files to play list and play back them in desired order.



■ ■ Photo album

You can save your favorite image files to photo album and view them in slide show mode. Also, you can view the slide show and play back audio files at the same time.





Uta-tomo™

EZweb subscription required


With this service, you can find someone having same preferences in music or local hits.



Listening Search

EZweb subscription required

"Listening Search" is the search service using your W42S's microphone. With this service, you can find out song title, artist name, or album title by playing back music close to the microphone.


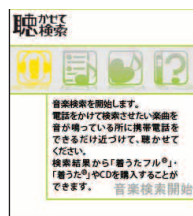


The screen layout and contents are just examples, and may differ from the actual screen.

Playing back a Chaku-Uta-Full® (full song)



1

 Press  (start) in the idle screen.

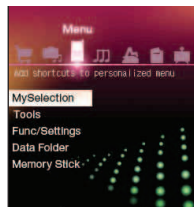




2

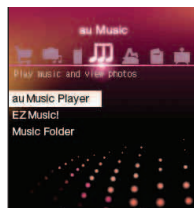 Press  to select  (au Music).



3

 Press  to select "au Music Player," and press  (select).






4

Press  to select "au Music ライブラリ," and press  (選択).





5

  
Press  to select "全曲一覧," and press  (選択).









Press  .






 You can enjoy sounds through speaker (with no stereo earphone connected). You can also enjoy audio files with no sound from the speaker by connecting stereo earphone to W42S beforehand (page 14).

 The screen layout and contents are just examples, and may differ from the actual screen.

Operations during playing back


-  : Skip to the beginning of the current audio file
-  (1 second) : Rewind
-  : Skip to the next audio file
-  (1 second) : Fast forward
-  : Pause/play back
-  : Adjust the volume

To end au Music Player

- ① With au Music Player active, press .
- ② Press  to select "Close player" and press  (select).




To play back audio files with Shuttle Player

Hold down  for at least one second in the idle screen.

 After 25 seconds with no operation, W42S displays the idle screen and starts BGM playing.

To switch to BGM playing

You can perform other operations with play back operation at the same time.

- ① During playing back an audio file, press .
- ② Press  to select "PlayBackground," and press  (select).

EZ • FM

 EZweb subscription required

With W42S, you can listen to the FM radio.


You can check titles of songs or download the songs you liked (when provided by Chaku-Uta®), while listening to EZ • FM.

How to listen to EZ • FM

There are two ways to listen to EZ • FM:

1


By connecting a stereo earphone to the W42S.

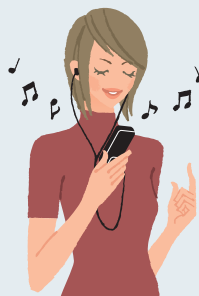

2

By connecting the standard AC adaptor 01 (optional) to the desktop holder and inserting the W42S into the desktop holder.

When you want to use the speaker, set "スピーカー / イヤホン切替" (Switching speaker/earphone) to "スピーカー" (Speaker). For details on the setting, see page 94.

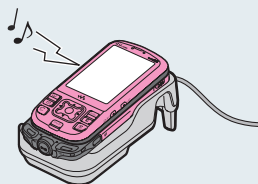

EZ • FM sounds from a stereo earphone by default.




To listen to EZ • FM clearly


The stereo earphone cord and standard AC adaptor 01 (optional) cord work as antennas. Extend the cord as long as possible and search for a direction that enables EZ • FM to sound better.



For indoor use, we also recommend listening to EZ • FM near a window in order to get a signal.

Listening to EZ・FM

1

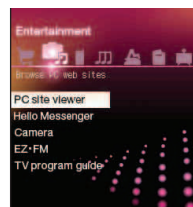Press  (start) in the idle screen, and press  to select  (Entertainment).



 You can also listen to EZ・FM by pressing  (EZapps) in the idle screen, pressing  to select "EZ・FM," and pressing  (起動).

2

Press  to select "EZ・FM," and press  (select).




EZ・FM is received and  appears.


 

How to read the EZ・FM screen






Radio frequency

Speaker/earphone

 When you use EZ・FM for the first time, the prior written notice appears. Select "承諾する." When you select "承諾(次回から非表示)," the prior written notice does not appear again.

 You can change the selected item by pressing  in the EZ・FM screen. Pressing  allows you to operate the selected item.

 When there is an incoming call with stereo earphone connected to your W42S, you can answer the call by pressing . Pressing incoming switch on stereo earphone also allows you to answer the call using stereo earphone.

 The specification is subject to change without prior notice. The screen shown is an example.

Listening to EZ・FM (continued)

To adjust volume

You can adjust the volume (Level 1 to 20).


Press  in the EZ・FM screen.




To select a radio station

Press  in the EZ・FM screen.





To display the song title

You can display the information such as the name of the artist or the title of the song you are listening.

Press  (曲名表示) in the EZ・FM screen.




-  Information may not be provided depending on the programs.
-  The data communication charges are needed for displaying the song title or other web based services.
-  The data communications charges are not needed for using EZ・FM.




 



To switch the sound output (Speaker/earphone)

- ① Press  (MENU) in the EZ・FM screen.
- ② Use  and  to select "設定" → "ラジオ機能設定" → "スピーカー / イヤホン切替" → "スピーカー" or "イヤホン" → "決定", and press  (決定).

To Minimize/End EZ・FM

You can minimize or end EZ・FM. If you minimize EZ・FM, you can perform other operations such as creating, sending and receiving mail while listening to EZ・FM.

 - ① Press  in the EZ・FM screen.
- ② Press  to select "Suspend" or "Quit," and press  (select).

-  EZ・FM ends automatically when no operation is made for two hours by default.
-  While minimizing EZ・FM, pressing  in the idle screen displays confirmation screen asking whether you end EZ・FM or not. When you press  to select "Quit," and press  (select), you can end EZ・FM.
-  While minimizing EZ・FM, pressing  (EZapps) in the idle screen, EZ・FM screen appears again.

PC site viewer

 **EZweb subscription required**

You need to subscribe to the EZ WIN course to use the PC site viewer service. Contact an au shop or Customer Service Center if you did not subscribe to the service at the time of purchase.

With PC site viewer, you can view WEB sites just like the ones shown on your personal computers on your cellphone. WIN ensures high-speed (up to 2.4Mbps downlink) data communications.

What you can do with PC site viewer

1


You can view WEB sites intended for personal computers with W42S.


A WEB site for PC



Viewing a site with PC site viewer




When you set the "表示モード" (Display mode) to "スモールスクリーン" (Small screen), a WEB site is displayed adjusted to the size of W42S screen, and you can view the site with simple  operations.

When you set the "表示モード" (Display mode) to "PCスクリーン" (PC screen), the part of the page laid out for PC screen is displayed, and you can view the site with  operations.

2


You can display or automatically-update a part of the WEB site information.

Setting to "待受指定" (Standby assignment)

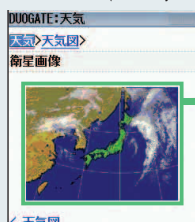



You can select a part of the WEB site page beforehand, and then set it to "待受指定" (Standby assignment).

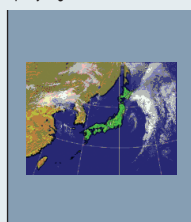Displaying as the "idle screen"




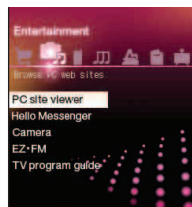
 
You can display a part of the WEB site page, and automatically-update it at specified intervals.

-  The screen layout and contents are just examples, and may differ from the actual screen.
-  When you press **アプリ** (接続) displaying the idle screen selected by "待受指定" (Standby assignment), you can operate the PC site viewer from the top of the page as usual.



Mastering operation basics


 
1

Press  (start) in the idle screen, and press  to select  (Entertainment).





2

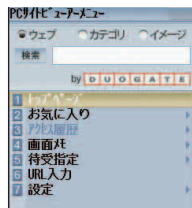
Press  to select "PC site viewer," and press  (select). Press **アプリ** (OK).




Warning message about data communications charges appears.

3

 Press  to select "トップページ," and press  (選択).




"Duogate" (<http://duogate.jp/>) is set by default.



-  The contents on the top page are just examples, and may differ from the actual screen.

 4

Press .



The screen scrolls.

Press  and you can select the links on the screen. When you select a link and press  (選択), the linked site appears.


Using "待受指定" (Standby assignment)

You can set a part of the WEB site as the idle screen. You can set it to be automatically updated at specified intervals.

A specified time passes in the idle screen, the WEB site selected by "待受指定" (Standby assignment) is displayed.

1



See steps 1 to 4 in "Mastering operation basics" (page 96) to display a site.

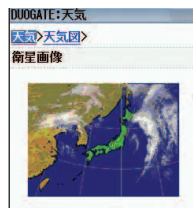

2

Press **アプリ** (メニュー).

 
Press **待受指定** (Standby assignment) and press **選択**.

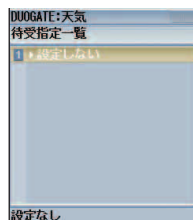

3

Press **アプリ** (オプション).

 Press **新規作成** and press **選択**.




Pressing **待受指定** narrows area displayed by "待受指定" (Standby assignment).

Pressing **拡大** and **待受指定** widens area displayed by "待受指定" (Standby assignment).

Pressing **縮小** again narrows area displayed by "待受指定" (Standby assignment).

4

 
Press **OK** twice.





Using "待受指定" (Standby assignment) (continued)


5

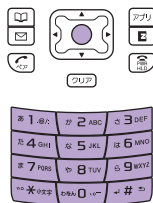Press  (編集), and enter the title, and press  (ok).




 
6


Press  (登録), and press  (設定).

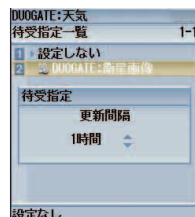

7

Press  to select the interval to update the idle screen.



When you select the interval to automatically-update the page displayed as the idle screen from among "24時間/12時間/8時間/4時間/2時間/1時間/30分/更新しない" (24 hours/12 hours/8 hours/4 hours/2 hours/1 hour/30 minutes/no update), and press  (OK). "待受指定警告表示" (Standby assignment warning sign) appears.

Press  (OK) and press  (OK) to complete the setting.






As the data communication like viewing homepages include many images charges you so much that you may want to subscribe to the discount service of the data communications charges.

Data communication charges for every update operation with automatically-update (set by "待受指定" (Standby assignment)) are needed separately.










 

You can use Charge Reference Service. This service estimates this month's data communications charges with no discount. By this service, you can see the rough number that was billed 1 or 2 days ago.

From au cellphone ⇒  (EZ) → Use  and  to select "Top menu" → "料金・申込・インフォ" (Charges, Applications, and Info)


From your PC ⇒ <http://my.kddi.com/> (MyKDDI)

※ Subscription is required for the first use.

Troubleshooting

Symptom	Items to check	Solution	Page
Unable to turn the power on.	Is the battery pack properly installed?	Properly install the battery pack.	—
	Is the battery pack charged?	Charge the battery pack.	12
	Did you hold down  for at least one second?	Hold down  for at least one second.	18
Unable to make calls.	Is "圏外" displayed on the screen?	Make a call from a location where "圏外" is not displayed.	18
	Did you enter the area code when entering the phone number?	When making a call to a phone other than a cellphone, first enter the area code even when both parties are inside the same city.	26
	Is the power turned on?	Hold down  for at least one second.	18
	Did you press  ?	Press  .	26
Unable to receive calls.	Is "圏外" displayed on the screen?	Move to a location where "圏外" is not displayed.	18
	Is the power turned on?	Hold down  for at least one second.	18
No reaction when a key is pressed.	Is the power turned on?	Hold down  for at least one second.	18
	Is the keylock set?	Slide the lock key down to cancel keylock.	15
Warning tone sounds, and power turns off.	There is not enough power remaining in the battery pack.	Charge the battery pack.	12
Incoming calls are automatically answered.	Is the record message set?	Hold down  for at least one second to cancel the record message.	32
Unable to hear the other party.	Is the volume during a call set too low?	Press  while you are talking. The volume during a call will increase.	28

Please visit the Sony Ericsson Mobile Communications Japan, Inc. web site for more information.

- From W42S ⇒  (EZ)(at least one second)(SonyEricsson@ez)
- From your PC ⇒ <http://www.SonyEricsson.co.jp/>







Remote lock

In the case you have lost your W42S










Using Remote lock, you can lock your W42S (Auto lock) remotely against unauthorized use.

■ ■ To set up the working environment of Remote lock

Auto lock is enabled by calling to your W42S specific times from the phone number specified beforehand.

- ① Press  (start) in the idle screen → press   .
- ② Enter Lock No., and press  (OK).
- ③ Use  and  to select "Set" → "ON."

Remote lock		M412
Set		ON
Duration		03min
		(01-10)
Frequency		05cnt
		(03-10)
Caller		0/3

- ④ Use  and  to select "Duration," and input time intervals.
Duration means the time intervals from the first call till a specified times of calls are received. You can set by the range of 1 to 10 minutes.
- ⑤ Use  and  to select "Frequency," and input the number of calls.
Frequency means the number of times of calls till Remote lock is set. You can set by the range of 3 to 10 times.
- ⑥ Use  and  to select "Caller," → the number (1 to 3) where you want to save.
Caller 1 to Caller 3 means the phone number used for setting Remote lock.
- ⑦ Use  and  to select "Manually," and input the phone number.
You can also enter phone number by selecting "Phone book." You can save up to 3 phone numbers.
- ⑧ Press  (cmplt).

To set Auto lock on W42S by Remote lock

Make a call to W42S under the working condition set by Remote lock.

Remote lock is set, and announcement is played notifying that Auto lock is set.



Remote lock cannot be set if W42S is turned off or in the area where reception strength is not good.



Other features

Various ways to get audio files

You can use SonicStage to transfer ATRAC (Adaptive Transform Acoustic Coding) 3 audio files from CDs, Internet, and PCs to "Memory Stick Duo"; and play them back with W42S.

Global Expert

W42S supports Global Expert Service using au IC card.

Global Expert is an international roaming service for the customers to use the phone replacing its au IC card with a GSM card for overseas use.

No special application procedure or daily/monthly fee is required, and the call cost is added to domestic call, making the payment procedure is simple.

Menu design settings

You can select a pattern for the menu screen. You can also set the pattern data you downloaded.

Infrared data exchange feature

You can exchange such data as a phone book, profile, or the data in the data folder between au cellphones that support infrared data exchange.

EZ apps (BREW®)

You can download game software from EZweb sites and play games.

"Memory Stick Duo" (sold separately) support

You can save photos and movies you took with the camera, back up personal data such as a phone book, and save received e-mails to it.

MEMO

Index

A

accessories	10
au IC card	11
au Music	88
BGM playing	91
ending au Music Player	91
playing back	90
playing back with Shuttle Player	91

B

battery pack	10, 11
battery power, remaining	3, 18
before use	10

C

C-mail	57
C-mail safe block function	57
creating and sending	58
icon	61
opening	60, 61
receiving	60
camera	66
movie	70
photo	68
successful taking	67
cellphone etiquette	1
charge indicator	11, 12
charging the battery pack	12
confirming your call costs	79
confirming your cellphone number	23
cross controller™	16

D

desktop holder	10, 12
Dialed calls	28
Disaster Message Board Service (demonstration)	6
display	19
domain	24

downloading Chaku-Uta-Full®

(full songs)	82
downloading Chaku-Uta®(ringtones)	80
drive mode	4

E

e-mail	48
attaching photo or movie	73
creating and sending	49
icons	49, 52, 53, 55
initial settings	22
opening	52, 53
receiving	52
replying	54
viewing attached photo/movie	55

e-mail address

changing	24
confirming	23

EZ Channel..... 83

EZ • FM..... 92

listening	93
minimizing/ending	94

EZ Navi 84

Security Navi	86
---------------------	----

EZ Top menu 76

EZweb..... 75

confirming your call costs	79
Favorite site	77, 78
initial settings	22

F

Favorite site

saving	77
viewing	78

H

Hello Messenger 62

inviting members	64
------------------------	----

I	
icons	19
idle screen.....	18
ID Unsent.....	27
incoming indicator	11
initial settings	22
Internet (See "EZweb")	

M	
mail	
C-mail.....	57
e-mail	48
mail filter.....	56
Main menu.....	20
manner mode.....	3, 29
"Memory Stick Duo".....	13
movie	
attaching to e-mail.....	73
recording	70
saving.....	71
viewing	72
Music Shuttle	17

N	
names of parts	11

O	
one-ring call	5
opening/closing	18
optional accessories	10

P	
pair function.....	46
making a call	47
saving.....	46
PC site viewer	95
Using "待受指定" (Standby assignment)	97
phone book	40
editing.....	42
making a call	44
saving.....	40
saving from dialed/received calls	45
Phone call.....	26
if you are unable to answer	27
making.....	26

notify/not notify the other party.....	26
receiving.....	27
photo	
attaching to e-mail.....	73
saving.....	69
taking.....	68
viewing	72
Photo mail	74
playing back Chaku-Uta-Full® (full songs)	90
power	3, 18

R	
Received calls.....	28
reception strength	3, 18
record message	3, 32
playing back	33
redialing.....	28
remote controller with microphone	14
remote lock	100
ringtone	30

S	
soft key	16
spam	5, 56
stereo earphone.....	14, 17

T	
text input	34
alphanumerics.....	35
Back Space function	35
changing input mode.....	34
characters assigned to the same key	37
character key assignment table.....	35
deleting characters.....	37
emoticons.....	38
pictorial characters	38
sentences.....	39
symbols	38
uppercase characters.....	37
troubleshooting	99

V	
volume during a call	28

For inquiries, call: au Customer Service Center (General Information)

From EZweb site:

How to access  5 5 7 5 6 or

EZ▶Top menu▶"料金・申込・インフォ"▶"お問い合わせ"

※Menu structure is subject to change without prior notice.

From regular phones:

 **0077-7-111**
フリーコール (toll free)

From au cellphones:

157 area code not required
(toll free)

Pressing "zero" will connect you to an operator,
after calling "157" on your au cellphone.



古紙配合率100%再生紙を使用しています



Cellphone and PHS operators collect and recycle unused
telephones, batteries and battery chargers at stores bearing the
♻️ logo regardless of brand and manufacturer to protect the
environment and reuse valuable resources.

Sales : KDDI Corporation

Okinawa Cellular Telephone Company

Manufacturer : Sony Ericsson Mobile Communications Japan, Inc.

Read this to access to
au online manual



A-CH0-100-11(1)
May 2006, 1st Edition